

UNITED STATES GOVERNMENT

Memorandum

TO : See list attached

DATE: SEP 11 1969

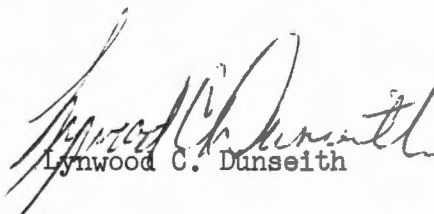
FROM : FS/Chief, Flight Support Division

In reply refer to:
69-FS55-34

SUBJECT: COLOSSUS 2C and LUMINARY 1B program and operational notes, first edition for mission H₁ (COMANCHE 67 and LUMINARY 116)

1. Enclosed is the present version of all known COLOSSUS and LUMINARY program and operational notes for the H₁ mission. These notes are divided into four sections. Section A covers all COLOSSUS program and operational notes and section B, all LUMINARY program and operational notes. Sections C and D cover COLOSSUS notes and LUMINARY notes, respectively, that are applicable to any present or future release of those programs. A description of the numbering convention is also included.

2. Any questions should be directed to the COLOSSUS Program Engineer, Mr. G. R. Sabionski, or the LUMINARY Program Engineer, Mr. T. G. Price, both at extension 6247.


Lynwood C. Dunseith

Enclosure

FS55:GRSabionski:jvm

RECEIVED
OCT 2 1969
FHM



Addressees:

BELLCOMM/G. Heffron
R. Sperry
CFK/F. Hughes
MIT/IL/D. Hoag
P. Felleman
S. Copps (3)
J. Nevins (3)
R. Larson
K. Greene (3)
F. Martin
G. Cherry (3)
J. Turnbull
NAA(Downey)/L. Hogan
J. Potts
B. Schoen, DA35 (3)
E. Woosley
GAEC(Houston)/D. Massey
C. Tillman (5)
IBM(Houston)/H. Norman
R. N. Harris
D. Hardin
LINK/A. Dahlberg
TRW/T. Fujawa
J. Norton
M. Meyers
CA/D. K. Slayton
CB/A. B. Shepard, Jr.
E. E. Aldrin
N. A. Armstrong
C. Conrad, Jr.
J. B. Irwin
A. M. Worden
J. Young
E. Cernan
R. Gordon
A. Bean
G. Cooper
E. Mitchell
J. A. Lovell
W. A. Anders
F. M. Haise
D. R. Scott
R. L. Schweickart
D. F. Eisele
J. Carr
T. Mattingly
S. Roosa
CF/W. J. North
CF22/M. E. Dement
C. C. Thomas
D. Bentley
J. Monroe
CF24/P. C. Kramer
A. G. Nolting
CF3/H. A. Kuehnel
J. J. Van Bockel
T. Putnam (MAC)
S. Faber
E. B. Pippert
EA2/R. A. Gardiner
ED3/M. T. Cunningham
S. M. Keathly
J. L. Raney
FM4/R. T. Savely
EG/D. C. Cheatham
EG2/C. Hackler
EG23/K. J. Cox
EG24/J. W. Van Artsdalen
EG27/D. W. Gilbert
R. Reid
H. G. Patterson
EG41/J. F. Hanaway
EG44/C. W. Frasier
EX3/B. G. Jackson
EA/M. A. Faget
KM/F. C. Littleton
PA/G. M. Low
PD/A. Cohen
PD6/K. L. Thomas
PD8/W. B. Goeckler
PE7/D. T. Lockard
PM/O. E. Maynard
J. L. Tomberlin
PM2/P. J. Ward
PM3/R. V. Battey
FA/C. C. Kraft, Jr.
R. G. Rose
FC/E. F. Kranz
G. S. Lunney
J. S. Llewellyn
J. C. Bostick
A. D. Aldrich
G. D. Griffin
J. E. Hannigan
C. B. Parker
J. W. Roach
R. A. Hoover
C. B. Shelley
W. E. Fenner
S. G. Bales
K. W. Russell
FM/J. P. Mayer
H. W. Tindall, Jr.
C. R. Huss
FM/D. H. Owen, Jr.
R. P. Parten
FM2/F. V. Bennett
FM3/C. C. Allen
FM4/J. C. McPherson
FM5/R. L. Berry
FM6/E. C. Lineberry
R. R. Regelbrugge
FM7/M. D. Cassetti
R. O. Nobles
S. P. Mann
FS/J. D. Watkins
FS2/T. A. Stuart
R. W. Cole
FS4/A. D. McLaughlin
FS6/J. A. Miller
FS5/J. C. Stokes, Jr.
T. F. Gibson, Jr.
L. J. Dungan
J. R. Garman
J. W. Jurgensen
C. D. Sykes
G. R. Sabionski(5)
G. R. Kimball
J. A. Martin
T. G. Price (5)
EG/MIT/T. Lawton
TRW(Redondo)/
M. Elowitz
LEC/W. Warrenberg

The numbering convention for the program notes is X.X.X, where:

A. First digit

1 = Crew notes and checklist items - These are notes being of particular interest to the crew.

2 = Ground notes - These are notes being of particular interest to mission operational and planning people.

3 = Restarts and priorities

B. Second digit

1 = Nouns, verbs, displays

2 = Selection of new programs and extended verbs

3 = Ground updates and pad loads

4 = Navigation and W-matrix

5 = Rendezvous and targeting

6 = Optics, IMU, and radars

7 = Guidance and control, boost, and entry

C. Last digit, order number

ENCLOSURE

Section A

Program and procedure notes applicable to the H₁ mission.

1. Crew Notes and Checklist Items

1.1 Nouns, Verbs, and Displays

1.1.1 Some nouns are not manually callable with valid data at any time, e.g., 5, 6, 7, 12, 16, 24, 25, 26, 29, 30, 31, 34, 41, 72, 97, 98.

1.1.2 The following nouns can never be loaded via V24 or V25: 40, 44, 45, 50, 63, 75, 80.

1.1.3 There are three priority displays in COLOSSUS which will ignore any response for two seconds:

V06N49 in R22
V05N09 in R52
V50N18 in R60 during P20

1.1.4 If P30 is used instead of V82 with time option to estimate perilune during translunar coast by loading zeros into N81, DO NOT PROCEED on N42, rather do V37EXXE. Avoidance procedure: Load 0.2 ft/sec into R2 of N81. Recognition: Arcsin alarm (code 1301). Recovery procedure: Hit error reset, then do V37EXXE.

Section A

1.2 Selection of New Programs and Extended Verbs

1.2.1 V37 should not be called for 15 seconds after the NO ATT light goes off. If it is, the PIPA FAIL inhibit bit will not be reset and a PIPA FAIL will go undetected. Recovery procedure: Select P00. Then reset IMODES 30 bit 5 via V25N07E, 1320E, 20E, E.

1.2.2 During periods of high computer activity, e.g., P11, P4X with Lambert, or P20 with a targeting program, the selection of certain extended verbs (notably V82, V83, V85, V90) may result in program alarms 1201 or 1202 and extended verb activity is lost. Recovery procedure: Reselect extended verb.

1.2.3 If an extended verb has been selected during a mission program, with normal displays, the extended verb logic initially blanks the DSKY. Any response during the time the DSKY is blank would do one of the following things: a) respond to a normal mission program display underneath the extended verb; b) respond to the first display in the extended verb which could be initiated simultaneously with your response.

1.2.4 The following program sequences will cause problems:

- a) P3X - P7X - P40 or P41
 P3X - P17 - P40 or P41
 P3X - P23 - P40 or P41

Problem: P3X computations are overwritten. Recovery procedure: Redo P3X and then P40 or P41.

- b) 1. P40/P41 - P27 - P52
 2. P27 - P40/P41 - P52

Problem: P27 and P40/P41 overwrite preferred computation. Recovery procedure: 1. Redo P40/P41 up to V50N18, then reselect P52. 2. Reload preferred REFSMMAT from ground.

1.2.5 V35 is restricted to P00 only. After V35 has been used, ten seconds should be allowed before the PIPA's are used; hit error reset to clear fail registers.

1.2.6 Depending upon initial gimbal angles, the VECPOINT routine may result in large computed rotations about the pointing vector when the pointing vector must be rotated through about 180° (an example of this would be in P40 or P41. If the +X axis were about 180° away from the thrust vector, the V50N18 may display a large change in outer gimbal angle.) Recovery procedure: If the computed attitude is acceptable then simply proceed with the maneuver. If it is not, then manually maneuver in pitch and have the solution recomputed after some 20-to-30 degrees by keying

Section A

PRO on V50N18 while not in CMC and AUTO.

1.2.7 Use V30 and V31 only in P00.

1.2.8 Any program can be terminated: 1) at any flashing display via V34E with the following exceptions: (a) when P20 is running in the background of some other program, a V34E on a P20 display (R60 or N49 in R22) will terminate P20 only. Conversely, a V34E on a prethrust program will turn off that program only but not P20; (b) V34E on a program with an extended verb running will terminate the extended verb only; (c) V34E is ignored in P06. 2) At any flashing or non-flashing display via V37EXXE with the following restriction: only a V37E00E is allowed after separation (PROCEED on V50N25 - 00041 in P62).

1.2.9 If the first display after selection of V79, V41, V42, or V55 does not come up, press KRLS. The desired display will then appear on the DSKY. See also anomaly report COM22.

Section A

1.3 Ground Updates and Pad Loads

1.3.1 Backwards integration can occur during P27 if a state vector with a future time tag has been uplinked. Avoidance procedure: Key V96E before selecting P27, then reselect P00 via V37E00E. Recovery procedure: same.

See also anomaly report COM21.

1.3.2 In P27, the PRO key is now ignored whenever a load verb is in the verb lights (see PUR 791.1). Therefore, when it is desired to answer a flashing load verb with a proceed, V33E should be used rather than the PRO key.

Section A

1.4 Navigation and W-matrix

1.4.1 Taking marks on a landmark in the vicinity of the horizon and identifying the landmark as an unknown landmark, may cause either of the following to occur:

a) square root abort, termination of P22, and return to P00. Recovery procedure: Reselect P22.

b) overflow in the initialization of the landmark portion of the W-matrix, resulting in erroneous navigation calculations. Recognition of this effect is difficult. Recovery procedure (if recognized): Reject update on ΔRAV display. Avoidance procedure: Do not use unknown landmark option of P22 for landmarks near the horizon. NOTE: It is recommended that all landmark sightings (known or unknown) be made such that the angle between the CSM-to-landmark LOS and the local vertical is less than 45 degrees.

1.4.2 The range and range rate displays (in R31 and R34) may degrade considerably at ranges below 0.3-0.5 NM depending on marking schedules and resultant AGC navigation accuracy.

1.4.3 If V56 (terminate P20) is keyed in during a computation in P32, P33, P34, or P35, these computations will be restarted from the beginning.

Section A

1.5 Rendezvous and Targeting

1.5.1 To ensure processing of the last sextant mark in P20, wait for 15 seconds before proceeding. If PROCEED is done too soon, one of the last two marks may be ignored.

1.5.2 P38 Stable Orbit program, operating in mode 1, only computes TFINAL on initial entry of the program. It is not recomputed on each recycle or proceed from V16N45. To have TFINAL recomputed, reselect P38.

1.5.3 P37 targeted maneuvers from earth parking orbit will yield transfer times on the order of two minutes for the portion of the premaneuver orbit from apogee to perigee (negative flight path angle), when using the V_{γ} target line built into the program. When the premaneuver orbit is highly circular with poorly defined apogee and perigee, the short transfer time will occur whenever the flight path angle is negative.

1.5.4 All uplinked or keyed in ΔV 's and target vectors must be in the same sphere of influence as the AGC determined state at TIG and TIG-30.

1.5.5 V83 and V85 displays will be meaningless at altitudes greater than 425 NM for both earth and moon if these verbs are exercised during periods of precision state vector integration.

1.5.6 Provided that the time of ignition, TIG, is defined to occur outside the lunar sphere of influence, P37 will always produce a conic solution although no precision solution may be possible.

1.5.7 For pre-apogee, long transit time abort, only the conic solutions in P37 may be grossly inaccurate yielding erroneous landing site coordinate displays. In addition, long integration period of perhaps 10 - 30 minutes may be experienced.

Section A

1.6 Optics and IMU

1.6.1 After a fresh start, or restart, or after turning optics power on, the optics must be taken out of zero and returned to perform an optics zero since it is not the position of the switch but the change to the zero position that triggers the zeroing program.

1.6.2 If the mode switch is in CMC and AUTO or HOLD mode during R55 (gyro torquing routine) or during V42, or during execution of the gyro pulse torquing option of P52/P54, the DAP will maneuver the vehicle to follow the platform as it moves.

1.6.3 During TVC, the optics may drift. To avoid this, always place the OPTICS ZERO switch to ZERO prior to P40. See also anomaly report COM23.

Section A

1.7 Guidance and Control, Boost, and Entry

1.7.1 During the trimming of Lambert derived v_G , the v display may jump in earth environment, 0.1 - 0.2 ft/sec at transfer angles of 140° , 0.3 - 0.5 ft/sec at transfer angle of 60° , and 0.5 - 1 ft/sec at transfer angle of 30° . For moon environment these jump numbers are 0.02, 0.05, and 0.1, respectively. Recovery procedure: For transfer angles of 30° or less, trim to 0.1 ft/sec, for all transfer angles greater than 30° trim to zero.

1.7.2 During TVC control (in P40), astronaut use of the DSKY will mask possible V97 display (thrust fail display). Avoidance procedure: Do not allow extended verb, monitor or static displays to occupy DSKY for long periods of time during TVC.

1.7.3 Following a hybrid deorbit burn with long coast times, the time to 0.05g's, TFE, will be in error by up to four minutes, depending on how early after the deorbit maneuver P61 is called. A recycle (V32) on N63 will improve the accuracy.

1.7.4 Because of the 0.01-second time granularity in the AGC, the calculation of small Lambert maneuvers may differ considerably from ground computations. The immediate effect, e.g., in P41, will be a different set of desired gimbal angles from those expected on the ground. The angular difference between the ground and AGC v_G 's is a function of earth or moon environment, the magnitude of v_G , and the active vehicle transfer angle. For 1 ft/sec maneuvers, this angular "error" could vary from $\sim 5^\circ$ (at 140° transfer) to $\sim 20^\circ$ (at 60° transfer) to $\sim 30^\circ$ (at 30° transfer) for the earth. For the moon, these angles are $\sim 1^\circ$, $\sim 3^\circ$, and $\sim 5^\circ$, respectively. For greater v_G the angular error is inversely proportional to the magnitude (approximately). Since the maximum error is 30° , the cross axis velocity introduced by performing the maneuver is $< \pi/6$ ft/sec.

1.7.5 If a roll jet fails "on" during SPS thrust, an appreciable roll excursion ($\approx 30^\circ$) may occur. The PITCH-YAW dap will continue to function properly.

1.7.6 The Down Range Error display (N66) in P67 will be set to 9999.9 NM when the vehicle state "goes past" the target. That is, under these conditions this display will not exhibit positive down range error.

1.7.7 The TFF display in V82 may be incorrect if the return trajectory is hyperbolic. Recognition: Noun 73, R2>36339 ft/sec.

1.7.8 There is an extremely low probability of a CDU transient occurring during boost which will change the CDU readings by $11\frac{1}{4}$ degrees. This probability can further be reduced by not changing switches on the main panel.

Section A

2. Ground Notes

2.1 Nouns, Verbs, and Displays

2.1.1 See 1.1.2.

Section A

2.2 Selection of New Programs and Extended Verbs

2.2.1 See 1.2.1.

Section A

3. Restart Notes

3.1 Nouns, Verbs, and Displays

None

Section A

3.5 Rendezvous and targeting

3.5.1 If a software or hardware restart occurs between V06N75 and V06N81 in P32 and P33, or between V06N81 and V06N82 in P32, the second display may be lost. Avoidance procedure: none. Recovery procedure: reselect program. See also anomaly report COM26.

Section B

Program and procedure notes applicable to the G mission.

1. Crew Notes and Checklist Items

1.1 Nouns, Verbs, and Displays

1.1.1 The nouns that can be called at any time with valid data are: 1, 2, 8, 9, 10, 20, 21, 27, 36, 46, 47, 48, R1 of 45, and R2 of 66 and 72.

1.1.2 Use of V30 or V31 (which uses N26 as transfer address) in programs that share N26 erasables may cause indeterminate transfer. (LNY-31) Avoidance: Use V30 or V31 only in P00. Recognition: Unexpected DSKY displays or activity. Recovery: Standard recovery (documented in crew checklist).

1.1.3 N⁴² values of h_a and h_p (in P30) will vary slightly from N⁴⁴ values of h_a and h_p (in V82). N⁴² uses conic calculations which are slightly in error for near lunar orbits. The larger the ΔV used in P30, the greater the error in N⁴². Recognition: Difference in displays.

1.2 Selection of New Programs and Extended Verbs

1.2.1 The following program sequences may cause problems:

1) P3X-P47-P40, P41, or P42 - The P3X computations may be overwritten.
Recovery: Repeat P3X and then P40, P41, or P42.

1.2.2 If V37 is attempted within approximately 20 seconds of a fresh start or ISS turn on, a PIPA FAIL will go undetected.
Recognition: None by the crew, ground support will see IMODES bit set. Recovery: Select P00. Then reset IMODES 30 bit 5 via V25N07E, 1302E, 20E, E.

1.2.3 During periods of high computer activity, the selection of certain extended verbs (notably V82, V83, V85, V90) may result in program alarms 1201 or 1202 and extended verb activity is lost. Recovery: Reselect extended verb.

1.2.4 If an extended verb has been selected during a mission program, with normal displays, the extended verb logic initially blanks the DSKY. Any response during the time the DSKY is blank would do one of the following things: a) respond to a normal mission program display underneath the extended verb; b) respond to the first display in the extended verb which could be initiated simultaneously with your response. In general, do not key a response (PRO, ENTER, V32E, V33E, V34E) to either a blank DSKY or a non-flashing display.

1.2.5 If RR is in Mode II, do not select a mission program via V37 after selecting P20 until the first R60 display in P20 (V50N18 priority display) (SDN-48). Recognition: RR may lock on in Mode II before the V50N18 if the +X axis is along the LOS. Recovery: Attitude maneuver (V50N18) will break lock, position +Z axis along LOS, and RR will be designated to Mode I.

1.2.6 Do not select P20 in the update mode prior to completion of P65, P66 or P67. The W-matrix initialization will destroy the E-memory descent targets.

1.2.7 Depending upon initial gimbal angles, the VECPOINT routine may result in large desired rotations about the pointing vector when the pointing vector must be rotated through about 180° (an example of this would be in P40, P41, or P42). If the +X axis were about 180° away from the desired thrust vector, the V50N18 may display a large change in yaw desired. Recovery: If the computed attitude is desired then simply proceed with the maneuver. If it is not, then manually maneuver in pitch and have the solution recomputed after some 20-to-30 degrees by keying PRO on V50N18.

1.2.8 If P20 is exited by means of V56E and no other program is running concurrently, the major mode display on the DSKY goes blank and V37 flashes requesting a new program. The integration in P20 is completed but there is no further integration performed until a new program is selected. (LNY-51) Avoidance: Answer the flashing V37 as soon as practical.

1.3 Ground Updates and Pad Loads

None

Section B

1.4 Navigation and W-matrix

1.4.1 A V96E can cause the W-matrix to be out of phase with the state vectors if it is performed: 1) during P20 mark processing, but only if the CSM state is being updated (V81); or 2) during AVETOMID, i.e., after responding to the FLV37 when leaving a program where Average-G was on and before the program lights change. Recovery: For 1) none needed; 2) V93E.

1.4.2 If a V37EXXE is used when the radar is being read during P20 or the self-test routines (R04 or R77), a 520 alarm may occur. The mark that was taken is not used. Recovery: ERROR RESET and continue.

1.4.3 If V56E or V34E on a P20 display is keyed to terminate P20 during a computation in P32, P33, P34 or P35, these computations will be restarted from the beginning.

1.4.4 P20 rendezvous navigation provides a priority display (V06N49) of ΔR and ΔV when the state vector update exceeds the pad-loaded erasable values RMAX and VMAX. Currently there are two problems: 1) If the display is desired before every incorporation, any negative value must be set into RMAX, not zeroes; 2) ΔR is displayed as zero if $\Delta R < 256$ meters for earth or < 64 meters for moon; ΔV is computed as zero if $\Delta V < 0.006$ meters/second for earth or < 0.0015 meters/second for moon. Avoidance procedure: If it is desired to observe V06N49 for each mark then RMAX should be loaded as any negative number. Recovery procedure: None.

Section B

1.5 Rendezvous and Targeting

1.5.1 Range rate display in V83 may degrade considerably at ranges less than 0.3 to 0.5 NM depending on navigation accuracy.

1.5.2 Lambert computations should not be used within three degrees of a target vector.

1.5.3 The V_g or Δv displays in body axes, N83 or N85, are based on reading the accelerometers every two seconds. The displays, however, are asynchronous one-second monitors. The result is a $\frac{1}{2}$ - $1\frac{1}{2}$ delay between application of ΔV and the visible result.

Section B

1.6 Optics, IMU, and Radars

1.6.1 If the attitude control mode switch is in AUTO or ATT HOLD mode during R55 (gyro torquing routine) or during V42 or during execution of the gyro pulse torquing option of P52, the DAP will maneuver the vehicle to follow the platform as it moves.

1.6.2 The predesignate routine of P22 does not work. Recognition: 530 alarm when P22 is selected. Recovery: Reselect P22. Avoidance: Use V83E to determine when CSM is in the Mode II limits before selecting P22. See Luminary Memo #109.

1.6.3 R29 (Powered Flight RR designate routine) does not work. The routine will continue designation throughout ascent, but never lock on. Avoidance: RR mode switch in SLEW or AUTO, i.e., not in LGC.

Section B

1.7 Guidance and Control, Boost and Entry

1.7.1 Do not select P40 or P42 if $V_G < \Delta V_m$ (i.e., ullage DELTA V should not exceed the total velocity-to-be-gained). The engine will be turned on for 0.01 second; may cause engine freeze-up and may be dangerous to crew safety. Recognition: R2 of N40 is less than 45000/weight prior to TIG-30. Recovery: Confer with ground.

1.7.2 In order to avoid excitation of the CSM-docked bending mode and possible damage to the docking tunnel, +X translation exceeding 10 seconds with jet 10 should be avoided and small steady ACA deflections with fine stick scaling ($4^\circ/\text{sec}$) should be used in the ATT HOLD mode. Recognition: Perceiving a surprising increase in RCS jet activity and seeing a sinusoidal motion on the rate needles and the FDAI error needles (between 2 and 4 cps).

1.7.3 During P40 and P42 when V99 or V97 is flashing, V06 may occasionally appear for one flash. There is no recovery procedure required.

1.7.4 A CALCMANU maneuver rate in excess of $0.5^\circ/\text{sec}$ should not be used in the CSM-docked configuration.

1.7.5 Do not use V90E (request R36 the rendezvous out-of-plane display) during P12. R36 uses the permanent state (which during ascent would be the \bar{R} and \bar{V} on the lunar surface) and since that state was not an orbital state an acceleration overflow in integration will occur causing a 430 POODOO alarm.

1.7.6 If a landing is attempted in P65, a PRO at touchdown to N60 will only temporarily zero attitude error; the automatic guidance may want a new attitude and thus cause jet firings. Recovery: Go to ATT HOLD and PRO again to N60. Avoidance: Land in ATT HOLD.

1.7.7 The LPD scale inscribed on the LM window is in error by approximately two degrees in elevation and azimuth. Therefore, the DSKY display of elevation angle is in error by about two degrees and the LM window pointing will be in error by also about two degrees.

2. Ground Notes

2.1 Nouns, Verbs, and Displays

2.1.1 See 1.1.2

2.2 Selection of New Programs and Extended Verbs

2.2.1 See 1.2.1

2.2.2 See 1.2.2

2.2.3 See 1.2.8

2.3 Ground Updates and Pad Loads

None

Section B

2.4 Navigation and W-Matrix

2.4.1 See 1.4.1

2.5 Rendezvous and Targeting

2.5.1 See 1.5.2

Section B

2.6 Optics, IMU, and Radars

None

2.6.1 See 1.6.2

2.6.2 See 1.6.3

2.7 Guidance and Control, Boost, and Entry

2.7.1 See 1.7.1

3. Restarts and Priorities

3.1 Nouns, Verbs, and Displays

3.1.1 There are seven priority displays in LUMINARY which ignore any response for two seconds:

- VO6N49 in R22
- V50N18 in P20 or P25
- VO5N09 in P20 (Alarm codes 501, 503, 514, 525, 526, 527)
- VO6N05 in P20
- V16N80 in P20
- VO5N09 in P22 (Alarm codes 501, 503, 514, 525, 526, 527, 530)
- VO5N09 in R12 (Alarm code 523)

3.1.2 No astronaut initiated verb/noun is restart protected.
Recovery: Reselect verb/noun.

3.2 Selection of New Programs and Extended Verbs

3.2.1 Restart will terminate extended verbs. Recovery:
Reselect extended verb.

3.3 Ground Updates and Pad Loads

None

3.4 Navigation and W-matrix

None

3.5 Rendezvous and Targeting

None

3.6 Optics, IMU, and Radars

3.6.1 If P20 is in progress, a hardware restart will remove TRACK ENABLE and force the program back to the beginning of the designate and attitude maneuver. Recovery: Self recovery.

3.7 Guidance and Control, Boost, and Entry

3.7.1 Restarts will terminate automatic attitude maneuvers.
Recognition: Restart light or program alarm (software restart) light on with V50N18 flashing. Recovery: PRO to V50N18 that returns to DSKY after restart.

Section C

Program notes applicable to all COLOSSUS releases.

1. Crew Notes and Checklist Items

1.1 Nouns, Verbs, and Displays

1.1.1 When loading decimal data into the AGC, the ENTER sometimes changes the last digit of the loaded value since PINBALL roundoff in decimal/octal/decimal conversion occurs when data is keyed in (decimal to octal) and entered and redisplayed (octal to decimal).

Section C

1.2 Selection of New Programs and Extended Verbs

1.2.1 In ENTRY (P62-P67), V37's are inhibited after a response to "please perform separation" except a request to perform P00. To call another program, P00 must be entered first, then the desired program called. Care should be taken, however, that P62 be reselected before entering the atmosphere, since AVEG is terminated by going to P00. Of course after separation, GNCS DAP control can only be established by initialization of the entry DAP in P62.

1.2.2 When a new program selection is made via V37, the key release light will remain on during R00 and will not go off until the new program is started. No further keyboard activity should be attempted until the key release light goes off and the new mode lights are displayed.

1.2.3 Extended verbs are not restart protected. If the restart light goes on during an extended verb, the verb should be reselected.

1.2.4 In extended verb V67, N99 correct values to be loaded in R3 (the option code) are 1, 2, and 3. All other values except 0 are treated as 3.

1.2.5 In R03 (V48) the permissible values for R1 of N46 are:

vehicle config A		0, 1, 2, 3 and 6
+X Quad AC	B	0 and 1
+X Quad BD	C	0 and 1
Deadband code	D	0 and 1
Maneuver rate	E	0, 1, 2 and 3

For R2 of N46, permissible values are:

Quad AC or BD roll code	A	0 and 1
Quad A code	B	0 and 1
Quad B code	C	0 and 1
Quad C code	D	0 and 1
Quad D code	E	0 and 1

If wrong values are loaded into R1, they will give results in R03 as follows:

A	4 is treated as 0. 5 is treated as 1. (MASSPROP will treat a 5 7 is treated as 3. as a 6.)
B - D	All odds are treated as 1. All evens are treated as 0.
E	4, 5, 6, 7 are treated as 0, 1, 2, and 3, respectively.

Section C

All wrong odd values in R2 are treated as 1. All wrong even values are treated as 0.

1.2.6 In V79 (Routine 64) correct values to be loaded in N79 are as follows:

a) $-8.9999 \text{ DEG/SEC} \leq R1 \leq +8.9999 \text{ DEG/SEC}$ (Note: If $R1 = 0$, at least one jet firing will result due to present logic implementation.)

b) $+30 \text{ DEG} \geq R2 \geq +0.4 \text{ DEG}$

Section C

1.4 Navigation and W-matrix

1.4.1 V96E may cause significant loss of W-matrix correlation in two cases: 1) The keying of V96E after a V37EXXE from a program using AVERAGE-G and before the XX appears in the mode lights (AVETOMID); 2) The keying of V96E during a permanent state vector integration in P20 during mark processing. In all other cases the use of V96E will cause no ill effects providing the next program selection in P00. Recovery procedure: If V96E is keyed in during the two cases described, key V93E at some time prior to the next navigation mark or VHF range input.

Section C

1.5 Rendezvous and Targeting

1.5.1 P20 rendezvous navigation provides a priority display (VO6N49) of ΔR and ΔV when the state vector update exceeds the pad-loaded erasable values RMAX and VMAX. Currently there are two problems: 1) If the display is desired before every incorporation, any negative value must be set into RMAX, not zeroes; 2) ΔR is computed as zero if $\Delta R \angle 256$ meters for earth or $\angle 64$ meters for moon; ΔV is computed as zero if $\Delta V \angle 0.006$ meters/second for earth or $\angle 0.0015$ meters/second for moon. Avoidance procedure: If it is desired to observe VO6N49 for each mark then RMAX should be loaded as any negative number. Recovery procedure: None. See also anomaly report COL 21.

1.5.2 The \underline{v}_G or $\underline{\Delta v}$ displays in control coordinates, N85 or N83, are based on reading the accelerometers every two seconds. The displays, however, are asynchronous one-second monitors. The result is a possible $\frac{1}{2}$ - $1\frac{1}{2}$ second delay between the application of ΔV and the visible result.

1.5.3 During rendezvous the orientation of the spacecraft about the track axis is unconstrained, when the rates are updated, approximately every eight seconds, the automatic tracking system does not demand a three-axis solution. This can result in drift around the track axis as follows: 1) for X-axis tracking at $\frac{1}{2}^\circ$ deadband, the maximum drift would be $0.0625^\circ/\text{sec}$ (or 180° in 47 minutes). At 5° deadband, the maximum drift would be $0.5^\circ/\text{sec}$ (or 180° in six minutes); 2) for preferred axis tracking the maximum drift would be $0.0761^\circ/\text{sec}$ (or 180° in 39 minutes) and $0.61^\circ/\text{sec}$ (or 180° in five minutes) for $\frac{1}{2}^\circ$ and 5° deadbands, respectively.

1.5.4 The P30 predicted apogee/perigee (N42) for a nominal 170×60 NM LOI₁ burn will be too large a number for apogee and a negative number for perigee (predicted numbers for Apollo 11 were $H_A = 412.3$ NM, $H_P = -122.2$ NM).

1.5.5 In P17 and P77 the correct values for R3 (search option) of N72 are 1 or 2. All other values are treated as a 2.

1.5.6 In R30, P21, P38, P78, R36, and R63 the correct values to be loaded into R2 of N06 or N12 for the option code are 1 and 2. Any other value will be treated as a 2, except P21, R36, P38/78 will treat a +1, 0, and -1 as a 1.

Section C

1.5.7 The assumption is made in the rendezvous targeting routines (i.e., not P30 or P31) that the resultant perigee altitude will be less than 9999.7 NM. If it is greater, then this display (N58) will become meaningless.

1.5.8 In P37 the correct values to be loaded into R2 for NO6 are 1 and 2. Any other value will be treated as a 1.

Section C

1.6 Optics and IMU

1.6.1 In P52 and P54 the permissible values for R2 of N06 are 1, 2, 3, and 4. Illegal values,

1, 5, 11, 15 are treated as 1.
 2, 6, 12, 16 are treated as 2.
 3, 7, 13, 17 are treated as 3.
 0, 4, 10, 14 are treated as 4.

1.6.2 In P52 and P54, loads of angles greater than 90 degrees into R1 and R2 of N89 cause erroneous results as follows:

R1 (Lat): $90 + X$ input yields $90 - X$ output,
 but longitude is rotated 180° .

R2 (Long): $90 + X$ input yields $-(180 - X)$ output.
 $-(90 + X)$ input yields $+(180 - X)$ output.

Section C

1.7 Guidance and Control, Boost, and Entry

1.7.1 TGO display is discontinuous immediately after ignition. TGO is computed from the ratio of velocity to be gained over ΔV , where ΔV is the velocity change over the last time period. At ignition ΔV will increase until it becomes fairly constant. Until this time, the ratio will behave erratically. The computation will settle in four-to-five seconds.

1.7.2 The engine gimbal trim angles (astronaut input to N48) should not exceed 9° .

1.7.3 During P40 when V99 is flashing and during P40/R41 when V97 is flashing, V06 occasionally appears for one flash. This happens because V97 and V99 are paste verbs. There is no recovery procedure required.

1.7.4 In P61 and P62, the permissible values for R3 of N61 (heads-up/head-down) are +1 and -1. 0 is treated as -1, i.e., roll angle of 0. All positive values are treated as +1 (180° roll angle). All negative values will give a + roll angle of the value decremented by 1. These angles are scaled in revolutions ($360/16384$ degrees per bit).

Section C

2. Ground Notes

2.1 Nouns, Verbs, and Displays

2.1.1 The program will ignore any attempt to load Channel 7 via the DSKY. It will not even alarm. Channel 7 is the superbank indicator and is under exclusive program control.

2.1.2 See 1.1.1.

Section C

2.2 Selection of New Programs and Extended Verbs

2.2.1 See 1.2.2.

Section C

2.3 Ground Updates and Pad Loads

2.3.1 Any P27 update will destroy the preferred orientation matrix (e.g., that calculated by P40, P41), except an update of the matrix itself. Therefore, if a preferred alignment is to be part of an update, it should be the last quantity in the sequence.

2.3.2 Downrupts may be lost at infrequent intervals during high level computer activity.

2.3.3 The lunar-solar ephemeris pad loaded data is only good for 2^{26} cs (approximately 14.5 days). If the flight lasts longer, new data must be loaded.

Section C

2.4 Navigation and W-matrix

2.4.1 See 1.4.1.

2.4.2 See 1.4.2.

Section C

3. Restart Notes

3.2 Selection of New Programs and Extended Verbs

3.2.1 See 1.2.3.

Section C

3.5 Rendezvous and Targeting

3.5.1 P37 is not restart protected. If a restart occurs, P37 has to be reselected.

Section C

3.6 Optics and IMU

3.6.1 See 1.6.1. Section A.

Section C

3.7 Guidance and Control, Boost, and Entry

None

Section D

Program notes applicable to all LUMINARY releases.

1. Crew notes and Checklist Items

1.1 Nouns, Verbs, and Displays

1.1.1 When loading decimal data into the LGC, the ENTER sometimes changes the last digit of the loaded value since PINBALL roundoff in decimal/octal/decimal conversions occur when data is keyed in (decimal to octal) and entered and redisplayed (octal to decimal).

1.2 Selection of New Programs and Extended Verbs

1.2.1 Do not select V92 during P00. Recognition: 1) 07 appears in program light; 2) the DAP is turned off for 10 seconds; 3) the W-matrix will be zero or overwritten; 4) flashing V06N41. Recovery: Select P00 via V37E00E, key V93.

1.2.2 Any program can be terminated: 1) via V34E at any flashing display, or 2) via V37EXXE at any flashing or non-flashing display.

1.2.3 When a new program selection is made via V37, the key release light will remain on during R00 and will not go off until the new program is started. No further keyboard activity should be attempted until the key release light goes off and the new mode lights are displayed.

1.3 Ground Updates and Pad Loads

None

1.4 Navigation and W-matrix

None

1.5 Rendezvous and Targeting

None

1.6 Optics, IMU, and Radars

None

1.7 Guidance and Control, Boost, and Entry

1.7.1 Do not load a zero or negative number in R1 or R2 of N48 (DPS pitch or Roll trim) (SDN-124). Recognition: 1204 alarm with V37 flash. Recovery: Recall present program and R03.

1.7.2 The TGO display in N40 is discontinuous immediately after ignition. The ΔV measured becomes fairly constant and the computation settles out in four-to-five seconds.

2. Ground Notes

2.1 Nouns, Verbs, and Displays

2.1.1 The program will ignore any attempt to load channel 7 via the DSKY. It will not even alarm. Channel 7 is the superbank indicator and is under exclusive program control.

2.2 Selection of New Programs and Extended Verbs

None

2.3 Ground Updates and Pad Loads

None

2.4 Navigation and W-matrix

None

2.5 Rendezvous and Targeting

None

2.6 Optics, IMU, and Radars

None

2.7 Guidance and Control, Boost, and Entry

None

3. Restarts and Priorities

3.1 Nouns, Verbs, and Displays

None

3.2 Selection of New Programs and Extended Verbs

None

3.3 Ground Updates and Pad Loads

None

3.4 Navigation and W-matrix

None

3.5 Rendezvous and Targeting

None

3.6 Optics, IMU and Radar

None

3.7 Guidance and Control, Boost, and Entry

None