Koyo.

Digital Timer series KT-V

KT-V4S-D KT-V4S-C-D

Operation Manual

Thank you for purchasing Koyo KT-V series timer

Please read this operation manual carefully before installing or operating

We recommend to keep this manual in appropriate place for your future use. We also recommend to include this manual in the package when you re-sell or export after installing on any machine or equipment.

> AutomationDirect.com 1-800-633-0405

KOYO ELECTRONICS INDUSTRIES CO.,LTD.

■ Safety Consideration

To minimize the risk of potential safety problem, read this section carefully before installing or operating this counter. Equipment damage or serious injury to personnel can result from failure to read or follow "WARNINGS" and "CAUTIONS" in this section.

! WARNING

Failure to follow instruction under this "WARNING" mark may result in serious injury to personnel or sever damage to equipment. Failure to follow instruction under this

"CAUTION" mark may result in injury to



personnel or damage to equipment. Indication legend This symbol indicates a general prohibition.

This symbol indicates an enforcement or an instruction.

[Use Environment and Conditions]

MARNINGS Do not use counters in

inflammable or explosive atmospheres.

This can cause injuries or fire

Do not use this product for applications involving human safety.

Use is specified for application where a possible failure or erroneous operation will not caus immediate danger to humans.

∴ CAUTIONS

Please use and store the product the range of the environment (vibrations, impacts, temperature, moisture, etc.) specified in the specifications. Otherwise, fire or damage to the product may be caused

Please understand the product before product before using it.

[Installation and Wiring]

<u>∕</u>NWARNINGS Use the product only with the power supply voltage listed in the specifications. Otherwise, fire, electric shock, or accidents may be caused.



Avoid incorrect wiring.

⚠ CAUTIONS

Execute wiring and installation as specified in the specifications. Otherwise, fire or accidents may be caused.

Execute wiring according to a method which a method which prevents stress onto the wiring. Otherwise, fire or accidents ma

Execute wiring with the power supply switched off. Otherwise, electric shock or

accidents may be caused

block.

Use only the specified screws to fix the terminal Otherwise, fire or accidents may

[Use Method]

MARNINGS

Do not touch the terminals while they are energized. This may cause electric shock of accidents because of erroneous

On not place the product close to inflammable matter. This may cause fire.

Use the product only according to the methods specified in the specifications.

On not insert screwdrivers or other metal objects into ventilation holes. This may cause electric shock o accidents

Otherwise, injuries or accidents may be caused.

Set value change during operation can cause severe accidents by switching the output to ON at a not intended set value because of a mistake in the operation procedure. Operation shall be executed by an authorized person within the scope where the safety of humans and equipment is assured.

Do not insert foreign objects



into the openings of the This can cause electric shock or



temperatures in the body and

[Maintenance]

⚠CAUTIONS

Do not try to disassemble or repair the product repair the product.

This can cause fire, electric shock, or accidents

Execute maintenance and inspections with the power

 
the power supply switched

[Discarding]

When discarding the product, please treat it as industrial waste. Bursting is to be feared, and fire or bodily injury may be caused

■ CE Marking

This product conforms to both the Low Voltage and EMC Directives under conditions described below.



Applicable standard — -EN61010-1

It requires an appropriate basic insulation on the load which is connected the relay output, when switching voltage of the relay output is above 150V.

Applicable standard EMI: EN55011 EMS: EN50082-2 *

■ UL-Recognized


Note that the product with DC power supply is UL-Recognized only with class II power supply.

■ General specifications

	Rating						
Item	AC powe	er supply type	DC p	ower supply type			
Rated power supply voltage	AC1	00-240V	DC12-24V				
Permissible power supply voltage fluctuation range	AC8	5-264V	DC10-26.4V				
Power consumption	Abo	ut 11 VA		About 4 W			
Sensor power supply		(20-28V)60mA	-				
		ioise: 10%p-p or less					
Memory in case of	EEPRO	EEPROM Rewriting for 100,000 times or less					
power failure		Memory time: 10 years					
Ambient temperature	-10 to 5	-10 to 50°C					
Storage temperature	-20 to 70°C(no ice formation)						
Ambient humidity	35 to 85% RH (no condensation)						
Withstand voltage	AC 2 kV for 1 minute (between AC input, 0 V, and relay contacts) (For DC power supply types only between 0 V and relay contacts)						
	Durability Displacement amplitude 0.5 mm, vibration frequency 10 to 55 Hz, in all three directions						
Vibration resistance	Erroneous Displacement amplitude 0.35 mm, vibration frequency 10 to 55 Hz, in all three direction						
	Durability	490 m/s (about 50 G)for 1 ms in all three direction					
Shock resistance	Erroneous operation 98 m/s (about 10 G)for 11 ms in all three direction						
Noise resistance	between the p	supply: ±1.5 kV power supply terminals th: 1 µs, rise: 1 ns)	DC power supply: ±1.0 kV between the power supply terminals (pulse width: 1µs, rise: 1 ns)				
Protection construction	IP65 (only the front panel)						
Weight	173 g			124 g			
	Ap	0.25~1.65mm ²					
Terminal block	Applicable crimp terminals			R1.25-3			
	Permissible tightening torque			0.5Nm (5Kgfcm)			

Installing Counter

①Insert the timer into the panel mounting hole

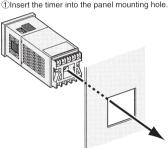

2)Install the mounting frame from the rear

■ Panel description

① Output LED (red)

It flashes when alarm output is ON.

2 Protection LED (red)

This flashes when it is in

It indicates key protect configuration.

The current value is reset.

•Setup mode Select what is setup

(0 when displaying the current time, preset value when displaying the remaining time)

■ Dimensions (in mm)

48

Mounting frame

key protect mode. (only at the time of key ON)

Run mode
This lights when


output is ON.

• Run mode

Setup mode

⑦RST key

Run mode

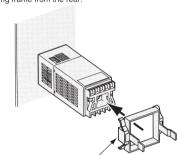

Mounting frame: Installation is possible horizontally or vertically

■ Mounting terminal block

■ Performance specifications

4 digits

1min $0.1 min \sim 999.9 min$

0.001s~9.999s 0.1s ~999.9s ~9999s ~99min59s

1min ~9999min ~9999h ~99h59min

0.1h ~999.9h

Туре

Number of digits

Display device

Range of time

Display selection

Timer accuracy

Input

External reset

Output

Output time (Flicker)

Installation method

ON-delay/OFF-delay/One-shot/Product/Flicker (with alarm output)

Current value: Red LED Hight 12mm

Preset value: Green LED Hight 7mm

The current time or The remaining time

Input voltage: "L" 0 to 3V, "H" 7 to 30V

DC output: NPN open collector output

Variable from 10 to 9990ms every 10ms

Any desired key can be set

Input logic: Negative logic (no voltage input)/Positive logic (voltage input

Negative logic 3.3kΩ(AC power supply type) /1.8kΩ(DC power supply type)

24V, 100mA, withstand voltage 35V,

residual voltage 1.5V or less Relay output: 1 transfer contact, AC 220V, 2A (resistance load)


Only embedded installation (terminal block connection)

0.013% ±15ms (Apply greater value)

Input resistance: Positive logic 15k Ω

15ms/5ms/1ms or less

Min. signal width 5ms

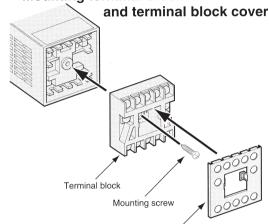

Terminal block cover

CAUTION Use only the enclosed screw to fix the terminal block. Observe the permissible tightening torque of 0.3 Nm (3 kgfcm) Otherwise, fire or accidents may be caused.

Install the terminal block cover after completion of wiring

③ Current value LED (red)

 Run mode It indicates the current value It indicates the setup configuration.

4 Set value LED (red)

 Run mode
 It indicates the set value. h: hour, m: minute, s: second

- ⑤ Preset value LED (green)
- •Run mode It indicates the preset value. Setup mode
 It indicates what is setting up.

6 Digit keys

 Run mode After changing the preset value, the preset value becomes effective after a condition of no key input has lasted for about one second.

Depth dimension


66mm

The setting contents are selected.

DC power supply type

AC power supply type


Removal of the timer

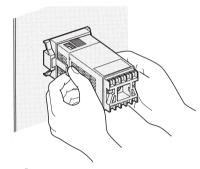

①Grab the levers and pull them outward by 2 or 3 mm. 2)Hold the levers pulled and pull them towards you

■ Terminal description

KT-V4S-D

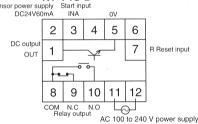

KT-V4S-C-D 3 4 | 5 7 R Reset input 9 12 10 11

*Prediction output is used together with DC output (OUT terminal)

Caution for wiring

- Keep the wires away from power lines.
- \bullet Keep the KT-V timer away from the place where there is heavy noise. Do not use unused terminal pins for any other
- purpose. • Do not use a folk-shape clamp when installing the
- wire in diagonal position, use a round-shape clamp, as shown below.

 














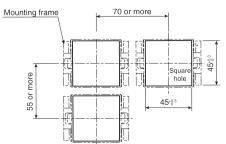

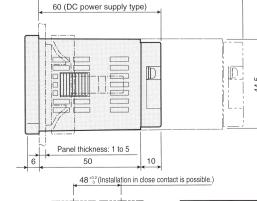


100 (AC power supply type)



★ If the product is with DC power supply, it requires a EMI/EMC filter (MR-2021)


■ Input connection examples

In case of an NPN open collector output type proximity switch ■Input logic : Negative logic (no-voltage input)(nEL)

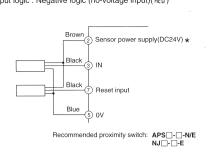


In case of a voltage output type or a PNP open collector output type

●Input logic: Positive logic (voltage input)(Po5)

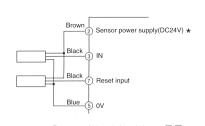

In case of a DC two-wire type proximity switch

 
● Input logic: Negative logic (no-voltage input)(nEL)



★In case of a DC type, provide a power supply voltage of 20 V or more


In case of a switch or relay

 Input logic: Negative logic (no-voltage input)
Response time of start input: 15ms



· As there is much input current, this connection is recommended

 
Input logic: Positive logic (voltage input) Response time of start input: 15ms




* The DC power supply type has no sensor power supply Please use an external power supply when a power supply is required

Output connection examples

 In case of contact output



In case of an NPN open collector output

 

■ Key operation

1. Change of the Preset Value Each time a digit key is pressed, the corresponding digit of the preset value is incremented by one.

The set value becomes effective about one second after each digit switch is released.



Example: When the present

setting is" IZ3 "
When the key 1 is pressed: 12억
When the key 2 is pressed: 134
When the key 3 is pressed: 234

(Hour) (Min)

2. Current Value Resetting

The current value is reset by pressing the reset key

(response time: 0.1s). When the key RST is pressed while the current value is "10":


"0" will be obtained displaying the current time The preset value will be obtained displaying the remaining time

3. Key Protection

When the DIP switch 7 is set to ON, the reset key and the digit keys are prohibited. When a prohibited key is pressed, the LED corresponding to the key flashes. For key protection, select the key to be prohibited in setup mode and set the DIP switch 7 to ON. At the time of shipping, key protection in setup mode is prohibited for all keys, so that prohibition for all keys is possible just besetting the DIP switch 7 to ON.

DIP switch setting

- Setting is executed with the DIP switches on top of the timer.
- Operate the DIP switches when the power is switched off.
 Operation in energized condition is not effective.
- When a DIP switch has been changed, press the RST key in run mode to reset the current value.

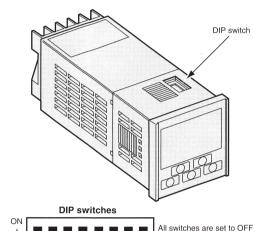



The DIP switches are very small. Operate them with the tip of a mechanical pencil or a small screwdriver and do not apply excessive force. as this can cause trouble.

F	Position (○ : ON / ● : OFF)									
Function	1	2	3	4	5	6	7	8	Operation	
Output mode selection	•	•							ON-delay	
	•	0							OFF-delay	
	0	•					٠		One-shot	
	0	0							Accumulation	
Time range selection			•	•	•				□.□□□sec	
			•	•	0				□□.□□sec	
			•	0	•				□□□.□sec	
			•	0	0				□□□□sec	
			0	•	•				□□min□□se	
			0	•	0				□□□□ min	
			0	0	•				□□□□ hou	
			0	0	0				□□hour□□m	
Display selection						0			the current time	
Display selection						•			the remaining tir	
Key protection			•				0		Key protection	
ney protection							•		No key protection	
Operation mode								0	Setup mode	
selection								•	Run mode	

Setup mode

Settings which can not be set by DIP switches are set in this setup mode

 
Setup mode setting items (1) Response time of start input —— 1 / 5 / 15ms

(2) Input logic - Positive logic, negative logic

Flicker mode, DIP switches

- (3) Output mode -(4) Range of time -- 00 min / 00 hour, DIP switches
- Setting of the flicker mode output time as (5) Output time 10 to 9990 ms (in units of 10 ms) (6) Prediction output —— An offset value is set in regard to the preset value
- (7) Reset key protection Reset key prohibition is set.
- (8) Digit key protection Prohibition of any digit key can be set


1.Switching between setup mode and run mode



- ① Setup mode is reached when the power is switched on with DIP switch 8 set to ON.
- ② Run mode is reached when the power is switched on with DIP switch 8 set to OFF.


2.Setup mode operation


Execute initial setting by the menu method as shown in the following table. An asterisk (*) indicates the factory default.

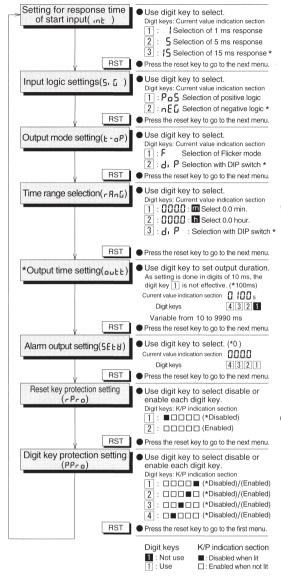



- It skips setting items with * mark except flicker mode
- When the initial setting is changed in setup mode, the current value must be reset in run mode by pressing the RST key.
- The setting contents become effective when the RST key is pressed to go to the next menu.

■ Timer output mode

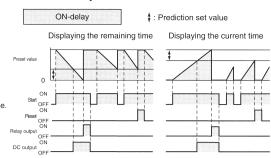


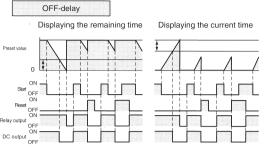

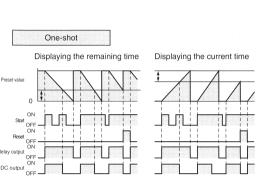

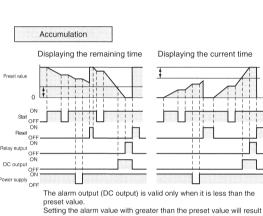

in triggering the alarm output at the timer reset value

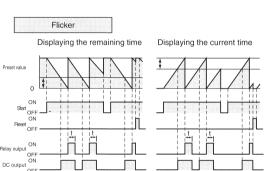

Output duration is variable from 10 to 9990 ms. (Default: 100 ms)

■ Error indication

153 Memory data error

Cancellation method : Press the RST (reset) key to delete the error indication.

The count value will become "0", the set value will become "5000", and the setup mode contents

will become the shipping defaults. Use after input of the set values requiring change

Use these tables to keep your settings in record.

DIP switch settings (mark selected items by "_".)

Switch No.	ON	OFF
1		
2		
3		
4		
5		
6		
7		
8		

Setup mode (mar	'k s	elec	cted	liten	ns by " \bigcirc ".)		
Item	Setting							
Response time of start input	1			5		15		
Input logic	Рс	5		n8	6			
Output mode	d,	Ρ		۶	:			
Output time								
Range of time								
Reset key protection	Disabled Enabled							
Digit key protection	1	2	3	4	(Ma	rk disabled with "○".)		

■ Caution items

(1)The 0 V terminal (2)of the DC type power supply and the input common 0 V terminal 5 are short-circuited inside the timer.

(2)Do not increase the power supply voltage gradually, but use a switch, a relay, etc. to impress the entire rated voltage at once. (3)When a DC 2-wire type proximity switch is used, set the input logic to negative logic for use.

(4) When the current value is changed during counting, the change becomes effective about one second after key input.

(5)Enter the setting contents for the DIP switches and the setup mode into the enclosed recording chart for maintenance and keep this chart at a secure place.

(6) Avoid use in the following environments. • Locations with an ambient temperature above 50°C or

- below -10°C.
- \bullet Locations with an ambient humidity over 85% or where
- condensation can be caused by rapid temperature changes. • Locations with dust, iron powder, corrosive gas, etc.
- · Locations exposed to direct sunlight.
- Locations with strong vibrations or shocks.
- (7) For testing of insulation withstand voltage, insulation resistance, etc., first separate the KT-V from the control circuits.
- (8)It saves the data in EEPROM when the power is shut down. The EEPROM can only be written for less than 100,000 times

ES-M 0267-2 CH 00MC