

Table of Contents

Safety Messages

Hazardous High Voltage	i
General Precautions - Read These First!	ii
Index to Warnings and Cautions in This Manual	iv
General Warnings and Cautions	ix
UL® Cautions, Warnings, and Instructions	xii

Table of Contents

Revisions	xvii
Contact Information	xviii

Chapter 1: Getting Started

Introduction	1-2
L100 Inverter Specifications	1-5
Introduction to Variable-Frequency Drives	1-17
Frequently Asked Questions	1-22

Chapter 2: Inverter Mounting and Installation

Orientation to Inverter Features	2-2
Basic System Description	2-5
Step-by-Step Basic Installation	2-6
Powerup Test	2-19
Using the Front Panel Keypad	2-21

Chapter 3: Configuring Drive Parameters

Choosing a Programming Device	3-2
Using Keypad Devices	3-3
“D” Group: Monitoring Functions	3-6
“F” Group: Main Profile Parameters	3-8
“A” Group: Standard Functions	3-9
“B” Group: Fine Tuning Functions	3-22
“C” Group: Intelligent Terminal Functions	3-32

Chapter 4: Operations and Monitoring

Introduction	4-2
Connecting to PLCs and Other Devices	4-4
Example Wiring Diagram	4-5
Using Intelligent Input Terminals	4-8
Using Intelligent Output Terminals	4-21
Analog Input Operation	4-29
Analog and Digital Monitor Output	4-30
PID Loop Operation	4-32
Configuring the Inverter for Multiple Motors	4-33

Chapter 5: Inverter System Accessories

Introduction	5-2
Component Descriptions	5-3
Dynamic Braking	5-5

Chapter 6: Troubleshooting and Maintenance

Troubleshooting	6-2
Monitoring Trip Events, History, & Conditions	6-5
Restoring Factory Default Settings	6-8
Maintenance and Inspection	6-9
Warranty	6-16

Appendix A: Glossary and Bibliography

Glossary	A-2
Bibliography	A-8

Appendix B: Drive Parameter Settings Tables

Introduction	B-2
Parameter Settings for Keypad Entry	B-2

Appendix C: CE–EMC Installation Guidelines

CE–EMC Installation Guidelines	C-2
Hitachi EMC Recommendations	C-6

Index
