

---

# Table of Contents

---

## Safety Messages

Hazardous High Voltage .....	i
General Precautions - Read These First! .....	ii
Index to Warnings and Cautions in This Manual .....	iv
General Warnings and Cautions .....	ix
UL® Cautions, Warnings, and Instructions .....	xii

## Table of Contents

Revisions .....	xvii
Contact Information .....	xviii

## Chapter 1: Getting Started

Introduction .....	1–2
SJ300 Inverter Specifications .....	1–6
Introduction to Variable-Frequency Drives .....	1–13
Frequently Asked Questions .....	1–17

## Chapter 2: Inverter Mounting and Installation

Orientation to Inverter Features .....	2–2
Basic System Description .....	2–5
Step-by-Step Basic Installation .....	2–6
Powerup Test .....	2–21
Using the Front Panel Keypad .....	2–23

## Chapter 3: Configuring Drive Parameters

Choosing a Programming Device .....	3–2
Using Keypad Devices .....	3–3
“D” Group: Monitoring Functions .....	3–6
“F” Group: Main Profile Parameters .....	3–8
“A” Group: Standard Functions .....	3–9
“B” Group: Fine-Tuning Functions .....	3–29
“C” Group: Intelligent Terminal Functions .....	3–47
“H” Group: Motor Constants Functions .....	3–62
“P” Group: Expansion Card Functions .....	3–65
“U” Group: User-selectable Menu Functions .....	3–67
Programming Error Codes .....	3–68

## Chapter 4: Operations and Monitoring

Introduction .....	4–2
Optional Controlled Decel and Alarm at Power Loss .....	4–4
Connecting to PLCs and Other Devices .....	4–7
Using Intelligent Input Terminals .....	4–11
Using Intelligent Output Terminals .....	4–42
Analog Input Operation .....	4–59
Analog Output Operation .....	4–62
Setting Motor Constants for Vector Control .....	4–65
PID Loop Operation .....	4–71
Configuring the Inverter for Multiple Motors .....	4–72

---

## Chapter 5: Inverter System Accessories

Introduction .....	5-2
Component Descriptions .....	5-3
Dynamic Braking .....	5-6

## Chapter 6: Troubleshooting and Maintenance

Troubleshooting .....	6-2
Monitoring Trip Events, History, & Conditions .....	6-5
Restoring Factory Default Settings .....	6-9
Maintenance and Inspection .....	6-10
Warranty .....	6-18

## Appendix A: Glossary and Bibliography

Glossary .....	A-2
Bibliography .....	A-6

## Appendix B: Serial Communications

Introduction .....	B-2
Communications Protocol .....	B-5
Communications Reference Information .....	B-17

## Appendix C: Drive Parameter Settings Tables

Introduction .....	C-2
Parameter Settings for Keypad Entry .....	C-2

## Appendix D: CE-EMC Installation Guidelines

CE-EMC Installation Guidelines .....	D-2
Hitachi EMC Recommendations .....	D-4

## Index

---