


Index

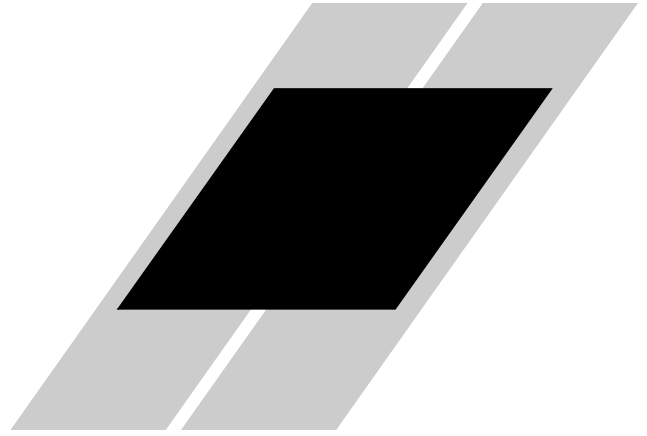

A

- A Group functions 3–9
- AC reactors 5–3
- Acceleration 1–15, 3–8
 - characteristic curves 3–26
 - second function 3–24
 - two-stage 4–19
- Acceleration stop function 3–21
- Access levels 3–5, 3–36, 4–25
- Access to terminals 2–2
- Accessories 5–2
- Adaptive auto-tuning 4–69
- Alarm signal 4–48
- Algorithms 3–62
- Algorithms, torque control 3–5
- Ambient temperature 2–7, A–2
- Analog input settings 3–11, 3–28
- Analog inputs
 - current/voltage select 4–26
 - operation 4–59
 - sampling filter 4–59
 - wiring examples 4–61
- Analog outputs
 - FM type 4–63
 - operation 4–62
 - PWM type 4–62
- Analog signal calibration 3–60
- Anti-windmilling 3–18, 3–21
- Arrival frequency A–2
- ASCII code table B–18
- Automatic restart 3–29
- Automatic voltage regulation 3–23
- Auto-tuning 4–67, A–2
 - adaptive 4–69
 - procedure 4–68
- Auto-tuning constants 3–62
- AVR 3–23

B

- B Group functions 3–29
- Base frequency 2–26, A–2
- Bibliography A–6
- Block check code B–18
- Brake control, external 3–46, 4–39, 4–58
- Braking 1–15
 - dynamic 5–6
- Braking resistor 2–5, A–2
- Braking resistor selection 5–7, 5–9
- Braking unit 2–5
- Braking unit selection 5–8
- Braking, dynamic 1–18
- Break-away torque A–2

C

- C Group functions 3–47
- Capacitor life curve 6–12
- Capacitor replacement 6–13
- Carrier frequency 3–41, A–2
- Catching a spinning motor 3–43, 3–61
- CE approval A–2
- CE-EMC guidelines D–2
- Chassis ground connection 2–20
- Choke 2–5, A–2
- Choke, DC link 5–4
- Chopper frequency 3–41
- Clearance 2–7
- Coasting 3–43, 3–61
- Commercial power source switching 4–23
- Communications 3–59
- Communications protocol B–5
- Communications, serial B–2
- Constant torque 3–14
- Constant volts/hertz operation 1–13
- Control algorithms 3–14
- Control gain switching 4–31
- Controlled deceleration 3–40
- Controlled deceleration at power loss 4–4
- Cooling fan control 3–44
- Copy Unit 1–3
- Current overload 3–34
- Current overload restriction 4–35

D

- D Group parameters 3-6
- DC braking 4-16, 4-17, A-2
 - derating 3-19
 - settings 3-18
- DC link A-2
 - choke 5-4
- Deadband A-2
- Deceleration 1-15, 3-8, 4-16
 - characteristic curves 3-26
 - second function 3-24
 - two-stage 4-19
- Default parameter values C-2
- Default settings
 - restoring 6-9
- Derating
 - DC braking 3-19
- Derating curves 1-11
- Derivative gain 3-22
- DeviceNet 5-5
- Digital operator 2-23, 3-3
 - force operation 4-34
 - removal 2-4
- Digital operator panel A-2
- Digital operators 1-3
- Dimensions
 - inverter 2-8
 - terminals 2-16
- Diode A-3
- Display restriction 3-37
- Droop control 4-32
- Duty cycle A-3
- Dynamic braking 5-6, A-3
 - usage ratio 3-44, 5-6

E

- Editing parameters 2-23, 2-26
 - in Run Mode 3-5, 3-36, 4-25
- Electromagnetic compatibility D-2
- Electronic thermal overload 3-30
- Elevator braking 3-46
- EMC installation guidelines D-2
- EMC installation recommendations D-4
- EMI A-3
- EMI filter 5-4
- Encoder feedback 3-16
- Energy savings mode 3-23
- Error
 - PID loop 4-47, A-3
- Error codes
 - programming 3-68
 - trip events 6-5
- Event clearing 4-27

- Expansion bay 2-4
- Expansion card functions 3-65
- Expansion cards
 - digital input 5-5
 - encoder feedback 5-5
 - input signals 4-41
 - output signals 4-58
- External brake control 4-39, 4-58
- External trip 4-21

F

- F Group functions 3-8
- Factory settings, restoring 6-9
- Fan default setting 3-44
- Fan outlet 2-7, 2-20
- Fan replacement 6-14
- Fan unit, Filler plate 1-4
- FAQ 1-17
- Features 1-2, 2-2
- Ferrite core 5-4
- Filters
 - noise suppression 5-2
- Fine-tuning functions 3-29
- Force operation from digital operator 4-34
- Forward run command 4-12
- Four-quadrant operation A-3
- Free-run stop 3-43, 3-61, 4-16, 4-20, A-3
- Frequency arrival signals 4-44
- Frequency matching 3-43, 3-61
- Frequency setting A-3
- Frequency-related functions 3-20
- Frequently asked questions 1-17
- Functions 1-15
- Fuse ratings 2-14
- Fuzzy logic accel/decel 3-23

G

- Gain settings 4-31
- Glossary of terms A-2
- Grommets 2-13

H

- H Group parameters 3-62
- Harmonics A-3
- History of trip events 3-7
- Home search A-4
- Horsepower A-3

I

- IGBT 1-13, A-3
 - test method 6-17
- Index of terminal functions 4-10
- Inertia A-3
- Initialization 6-9
- Input active range 3-28
- Input circuits 4-11
- Input terminals 2-18
- Inspection
 - electrical measurements 6-15
 - IGBT test method 6-17
 - measurement techniques 6-16
 - procedures 6-10
 - unpacking 2-2
- Installation 2-6
- Instantaneous power failure 4-51
- Insulation test 6-11
- Integral gain 3-22
- Intelligent input terminals 3-47, 4-11
- Intelligent input wiring examples 4-11
- Intelligent output terminals 3-53, 4-42
- Intelligent terminal functions 3-47
- Intelligent terminal index 4-10
- Intelligent terminals A-3
- Inverter 1-17
- Inverter definition A-3
- Inverter specifications 1-6
- Isolation transformer A-4

J

- Jog command 4-16
- Jog frequency settings 3-13
- Jogging operation A-4
- Jump frequency 3-20, A-4

K

- Keypad
 - features 2-23, 3-3
 - navigation 2-25, 3-4
 - navigation, trip events 6-8
- Keypad features 2-23
- Keypads 1-3, 3-2

L

- LEDs 2-23, 3-3
- Line reactor A-4
- Linear accel/decel 3-26
- Logic connector 4-9
- Logic terminals 3-47, 3-53
 - input wiring examples 4-11

M

- Main profile parameters 3-8
- Maintenance procedures 6-10
- Megger test 6-11
- Model number convention 1-5
- Momentum A-4
- Monitor mode 2-25, 2-29, 2-30, 3-4
- Monitoring functions 3-6
- Motor constants 3-62, 4-65
 - auto-tuning 4-67
 - manual setting of 4-70
- Motor load A-4
- Motor poles 2-28
- Motor selection 1-18
- Motor wiring 2-20
- Mounting location 2-6
- Multiple motors
 - configuration 4-72
- Multi-speed operation 4-13, A-4
- Multi-speed profiles 1-15
- Multi-speed settings 3-13

N

- Nameplate 1-5
- Navigational map 2-25, 3-4
 - trip events 6-8
- NEC A-4
- NEMA A-4
- NEMA compliance 2-13
- NEMA rating 2-7
- Noise filters 5-2
 - AC reactor 2-5
- Noise suppression 1-18

O

- Open-collector outputs 4-42, A-4
- Operational modes 3-5
- Operator interfaces 1-3
- Optimal accel/decel 3-23
- Optional components 2-5
- Options 1-2
- Orientation A-4
- Output circuits 4-42
- Output deviation for PID control 4-47
- Output frequency 3-8
- Output overload 3-34
- Output terminals 2-20
- Over-current trip 3-29
- Overload advance notice signal 4-46
- Overload restriction 3-34, 4-35
- Over-torque signal 4-50

P

P Group functions 3-65
P/PI selection 4-31
Parameter editing 2-23, 2-26
Parameter settings tables C-2
Parameters 1-15
Phase loss 3-29
PID loop 1-18, A-4
 clearing 4-30
 error A-3
 ON/OFF 4-30
 operation 4-71
 output deviation 4-47
 process variable A-4
 setpoint A-5
 settings 3-22
PLC, connecting to 4-7
Poles 1-18
Poles of motor 2-28
Potentiometer 2-27, 4-61
Power failure 4-51
Power failure response 3-29
Power loss 4-4
Power loss response 3-40
Power source switching 4-23
Power-on time over signal 4-54
Powerup test 2-21
 observations 2-30
Powerup, unattended start 4-22
Process variable A-4
Program mode 2-25, 2-30, 3-4
Programming device 3-2
Programming error codes 3-68
Programming error monitoring 3-7
Proportional gain 3-22
Pulse-width modulation 4-62
PWM A-4

R

Ratings label 1-5
Reactance A-5
Read/write copy unit 1-3, 3-2
Rectifier A-5
Reduced torque 3-14
Regenerative braking A-5
Regulation A-5
Regulatory agency approvals 1-5
Relay alarm contacts 4-48
Remote control 4-33
Removable components 1-4

Reset function 4-27
Reset Mode 3-61
Restart Mode 3-43, 3-61
Retention screws 2-4
Reverse run command 4-12
Reverse torque A-5
Reverse U-shape accel/decel 3-26
Rotor A-5
Run command 4-12
Run mode 2-30, 3-5
Run signal 4-43
Running the motor 2-29
Run-time edits 3-5, 3-36, 4-25
Run-time signal 4-54

S

Safety messages i
Saturation voltage A-5
Second motor 4-18
Sensorless vector control 3-14, 3-16, A-5
Serial communications 3-59, B-2
Serial communications protocol B-5
Set 2nd/3rd motors 4-18
Setpoint A-5
Sigmoid accel/decel 3-26
Single-phase power A-5
Sinking I/O 4-7
Slip A-5
Software lock 3-5, 3-36, 4-25
Sourcing I/O 4-7
Spare parts 6-12
Specifications
 derating curves 1-11
 general 1-9
 logic signals 4-9
Speed control 1-13, 1-15, 4-13
Speed loop gains 4-31
Speed pot 2-27
Squirrel cage A-5
Standard functions 3-9
Start frequency A-5
Stator A-5
Stop command 4-12
Stop Mode 3-43
Supply wiring 2-18
Switching frequency 3-41
Symbol definitions i
System description 2-5

T

- Tachometer A-5
- Technical support 1-xviii
- Term definitions A-2
- Terminal block 1-4
- Terminal listing 4-10
- Thermal overload 3-30
- Thermal protection 4-28
- Thermal switch A-6
- Thermal warning 4-55
- Thermistor A-6
- Thermistor input 4-28, 4-55
- Third motor 4-18
- Three-phase power A-6
 - motor phase connections 1-14
- Three-wire interface 4-29
- Torque 1-13
- Torque boost 3-16
- Torque control algorithms 3-5, 3-14, 3-62
 - tuning 4-65
- Torque limit 4-37
- Torque limit signal 4-54
- Torque specs, terminals 2-16
- Torque, definition A-6
- Transistor A-6
- Trip events 3-7
 - clearing 6-5
 - definition A-6
 - error codes 6-5
 - external 4-21
 - history 6-8
 - monitoring 6-5
- Trip history 6-8
- Trip mode 4-27
- Troubleshooting tips 6-3
- Two-stage accel/decel 4-19

U

- U Group functions 3-67
- UL instructions xii
- Unattended start protection 4-22
- Under-voltage signal 4-51
- Under-voltage trip 3-29
- Unpacking 2-2
- Up/Down functions 4-33
- User-selectable menu functions 3-67
- U-shape accel/decel 3-26

V

- V/f control 3-14
- V/f control setting 3-45
- V/f free-setting 3-15
- Variable torque 3-14
- Variable-frequency drives
 - introduction 1-13
- Velocity profile 1-15
- Ventilation 2-7, 2-20

W

- Warnings
 - operating procedures 4-3
- Warranty 6-18
- Watt loss A-6
- Windmilling 3-18, 3-21
- Wiring
 - analog inputs 4-61
 - gauge 2-14
 - intelligent input wiring examples 4-11
 - logic 2-20
 - logic connector 4-9
 - output 2-20
 - power input 2-18
 - preparation 2-13
 - serial communications B-3
 - system diagram 4-8

Z

- Zero-phase reactor 5-4

