



Warnings	w-1
Chapter 1: Getting Started	1-1
Manual Overview	1-2
Overview of this Publication.	1-2
Who Should Read this Manual.	1-2
Technical Support	1-2
Special Symbols	1-2
SureStep™ System Introduction	1-3
SureStep™ Part Number Explanation.	1-3
SureStep™ System Recommended Component Compatibility.	1-5
Drive and Motor Compatibility	1-6
Microstepping Drives Introduction	1-9
Standard Microstepping Drives	1-9
High Bus Voltage Microstepping Drives	1-11
Advanced Microstepping Drive	1-12
Standard Integrated Motors/Drives	1-13
Advanced Integrated Motors/Drives.	1-14
Step Motor Introduction	1-15
Stepping System Power Supply Introduction.	1-16
Selecting the Stepping System	1-17
Use with AutomationDirect PLCs.	1-17
High-Speed Pulse Output Control (Standard Drives)	1-17
Serial Communication Control (Advanced Drives)	1-17
Chapter 2: SureStep STP-DRV-4830,-4845,-6575 Standard DC Microstepping Drive.	2-1
Features.	2-2
Specifications.	2-3

Typical Wiring Diagram	2–5
Wiring Connections and Configuration Switches	2–5
STP-DRV-4830	2–5
STP-DRV-4845 and STP-DRV-6575	2–6
Connecting the Motor	2–7
Connecting the Power Supply	2–8
SureStep™ Drive Digital Inputs and Outputs	2–9
Connecting the Input Signals: STEP and DIR	2–9
Connecting the Input Signals – EN Input	2–10
Connecting the Fault Output	2–11
Drive Configuration	2–12
Drive Configurations Settings	2–12
DIP Switch Settings	2–13
Alarm Codes	2–16
Mounting the Drive	2–19
Drive Heating	2–19
Dimensions and Mounting Slot Locations	2–19
STP-DRV-4830	2–19
STP-DRV-4845 and STP-DRV-6575	2–20
Chapter 3: SureStep STP-DRV-4035 Microstepping Drive	3–1
Features	3–2
Specifications	3–3
Typical Wiring Diagram	3–4
Connection and Adjustment Locations	3–4
Connecting the Motor	3–5
Connecting the Power Supply	3–6
Connecting the Logic	3–7
Using Logic That is Not 5 volt TTL Level	3–9
The Enable Input	3–9
Setting Phase Current	3–10
Current Setting Formula	3–10
Current Setting Table	3–11
Microstepping	3–12
Idle Current Reduction	3–13

Self Test	3–13
Dimensions	3–15
Chapter 4: SureStep Advanced Microstepping Drives . . .	4–1
Features	4–2
Specifications	4–3
Typical Wiring Diagram	4–4
Connection Locations & Pin-out	4–4
Connecting the Power Supply	4–6
Connecting the I/O	4–7
SureStep™ Drive Digital Inputs	4–7
Connecting STEP and DIR to 5V TTL Logic	4–7
Connecting STEP and DIR to Logic Other Than 5V TTL Level	4–8
Connections to the EN Input	4–9
Connecting the Analog Input	4–10
Connecting the Digital Output	4–10
LED Display Codes	4–12
Drive Configuration	4–15
Mounting the Drive	4–17
Drive Heating	4–17
Dimensions and Mounting Slot Locations	4–17
Chapter 5: SureStep STP-DRVAC-24025 Microstepping Drive	5–1
Features	5–2
Specifications	5–3
Mounting the Drive	5–4
Dimensions	5–4
Wiring Connections and Configuration Switches	5–5
STP-DRVAC-24025	5–5
Connecting the Power Supply	5–6
Connecting the Motor	5–7
Selecting the Motor	5–8
Connecting the I/O	5–9
Step/Direction Mode and CW/CCW Mode Jumper	5–9
Connecting the Input Signals - Step and Direction	5–9

The Enable Input	5–10
Connecting the Fault Output Setting	5–11
Drive Configuration	5–12
Microstepping	5–13
Setting Running Current	5–13
Idle Current Reduction	5–14
Step Noise Filter	5–14
Load Inertia	5–14
Smoothing Filter	5–14
Self Test	5–15
Alarm Codes	5–16
Chapter 6: SureStep Integrated Motors/Drives	6–1
Features	6–3
General Features:	6–3
Standard Drive Features	6–3
Advanced Drive Features	6–3
Features Comparison	6–4
Specifications	6–5
Getting Started	6–11
Installing Software	6–11
Mounting	6–11
Additional Reading	6–12
Mating Connectors and Accessories	6–12
Using a Regulated Power Supply	6–17
LED Error Codes	6–18
STP-MTRD Inputs and Outputs	6–22
Input/Output Functions	6–25
The Step (STEP) and Direction (DIR) Inputs	6–26
The Enable (EN/IN3) Digital Input	6–28
The Analog (AIN) Input	6–29
The Digital Output	6–30
Using the Optional Encoder	6–31
Configuring the Standard STP-MTRD	6–32
Drive/Motor Heating	6–37

Torque Speed Graphs	6–40
Dimensions and Mounting Slot Locations	6–43
Chapter 7: SureStep Stepping Motors	7–1
Features	7–2
Design and Installation Tips	7–3
Specifications	7–4
Power Supply and Step Motor Drive	7–8
Mounting the Motor	7–8
Connecting the Motor	7–8
Extension Cable Wiring Diagrams	7–9
Connecting a STP-MTRAC-23x or STP-MTRAC-34x Motor	7–10
Connecting a STP-MTRAC(H)-42 Motor	7–11
Motor Dimensions and Cabling	7–12
Typical Dimension & Cable Diagrams	7–12
Typical Dimension & Cable Diagram for STP-MTRH	7–15
Typical Dimension & Cable Diagram for STP-MTRAC	7–18
Typical Dimension & Cable Diagram for STP-MTRAC(H)-42x	7–20
Torque vs. Speed Charts	7–21
Chapter 8: SureStep Linear Actuators	8–1
Features	8–2
Design and Installation Tips	8–3
Model Number Explanation	8–3
Specifications	8–4
Power Supply and Step Motor Drive	8–8
Mounting the Motor	8–8
Journal Mounting	8–8
Connecting the Motor	8–10
Extension Cable Wiring Diagrams	8–10
Motor Dimensions and Cabling	8–12
Thrust vs. Speed Charts	8–16
Chapter 9: SureStep System Power Supplies	9–1
Features	9–2
Specifications	9–3
Drive Heating	9–4

Choosing a Power Supply	9–5
Power Supply Terminal & Component Layout.	9–7
Mounting the Power Supply	9–8
Dimensions	9–9
Dimensions (continued).	9–10
Chapter 10: SureMotion Pro Configuration Software. . .	10–1
SureMotion™ Pro Software	10–2
Communication.	10–2
Motor Configuration	10–2
Motion and I/O	10–3
Drive Pull-down Menu.	10–4
Chapter 11: SureStep Communications.	11–1
Connecting to a Host Using RS-485	11–2
Four-Wire Configuration	11–2
Two-Wire Configuration.	11–3
Assigning RS-485 Addresses.	11–3
Connecting to an STP-MTRD-xxxxR using the STP-USB485-4W Adapter	11–4
Connecting to a drive using RJ12.	11–5
Appendix A: Accessories	A–1
Braking Accessories	A–2
Regeneration Clamp Features	A–2
Cables and Accessories	A–5
Encoder Options	A–10
Encoder Mounting Accessories.	A–15
Encoder Specifications	A–16
Differential Electrical Specifications	A–18
Wiring Examples	A–19
Line Filters	A–24
Appendix B: Using SureStep with AutomationDirect PLCs	B–1
Compatible AutomationDirect PLCs and Modules.	B–2
Typical Connections to a Productivity PLC.	B–6
Typical Connections to a DL05 PLC.	B–7
Typical Connections to an H0-CTRIO	B–8

Typical Connections – Multiple Drives/Motors.	B-9
Typical Direct LOGIC PLC RS-232	
Serial Connections to an Advanced SureStep Drive	B-10
Typical CLICK, P-Series, & BRX PLC RS-232	
Serial Connections to an Advanced SureStep Drive	B-11
Typical RS-485 Connections to	
Integrated Motor/Drives	B-12
Appendix C: Selecting the SureStep Stepping System . . .	C-1
Selecting the SureStep™ Stepping System	C-2
The Selection Procedure	C-2
How many pulses from the PLC to make the move?	C-2
What is the positioning resolution of the load?	C-3
What is the indexing speed to accomplish the move time?	C-3
Calculating the Required Torque	C-4
Leadscrew – Example Calculations.	C-8
Step 1 – Define the Actuator and Motion Requirements	C-8
Step 2 – Determine the Positioning Resolution of the Load	C-9
Step 3 – Determine the Motion Profile.	C-9
Step 4 – Determine the Required Motor Torque	C-9
Step 5 – Select & Confirm the Stepping Motor & Driver System.	C-10
Belt Drive – Example Calculations	C-15
Step 1 – Define the Actuator and Motion Requirements	C-15
Step 2 – Determine the Positioning Resolution of the Load	C-16
Step 3 – Determine the Motion Profile.	C-16
Step 4 – Determine the Required Motor Torque	C-16
Step 5 – Select & Confirm the Stepping Motor & Driver System.	C-17
Index Table – Example Calculations.	C-19
Step 1 – Define the Actuator and Motion Requirements	C-19
Step 2 – Determine the Positioning Resolution of the Load	C-19
Step 3 – Determine the Motion Profile.	C-20
Step 4 – Determine the Required Motor Torque	C-20
Step 5 – Select & Confirm the Stepping Motor & Driver System.	C-21
Engineering Unit Conversion Tables, Formulae, & Definitions:	C-22

BLANK
PAGE