

THEMAS  
The Energy Management System

SOFTWARE REQUIREMENTS SPECIFICATION

DOCUMENT NUMBER  
D\_THEMAS\_SRS\_001

Version 1

October 14, 1998

Prepared By  
THEMAS Team

Approvals

---

Principle Requirements Architect

---

Principle Design Architect

---

Principle Implementation Architect

## Table of Contents

1.0 Introduction .....	1-1
1.1 Purpose .....	1-1
1.2 Scope .....	1-1
1.3 Definitions, Acronyms, and Abbreviations .....	1-1
1.4 References .....	1-2
1.5 Overview .....	1-2
2.0 General Description .....	2-1
2.1 Product Perspective .....	2-1
2.2 Product Functions .....	2-1
2.2.1 Monitor Temperature .....	2-1
2.2.2 Determine Utilization .....	2-1
2.2.3 Initialize System .....	2-2
2.2.4 System Reports .....	2-2
2.3 User Characteristics .....	2-2
2.4 General Constraints .....	2-2
2.5 Assumptions and Dependencies .....	2-2
2.5.1 Operating System Assumptions .....	2-3
2.5.2 Thermostat Hardware Assumptions .....	2-3
2.5.3 Heating/Cooling Hardware Assumptions .....	2-3
3.0 Engineering Requirements .....	3-1
3.1 Functional Requirements .....	3-1
3.1.1 Initialize Operational Parameters .....	3-1
3.1.1.1 Load H/C Unit Definitions (SRS-001) .....	3-1
3.1.1.1.1 Introduction .....	3-1
3.1.1.1.2 Inputs .....	3-1
3.1.1.1.3 Processing .....	3-1
3.1.1.1.4 Outputs .....	3-1
3.1.1.2 Load Thermostat Definitions (SRS-002) .....	3-1
3.1.1.2.1 Introduction .....	3-1
3.1.1.2.2 Inputs .....	3-1
3.1.1.2.3 Processing .....	3-1
3.1.1.2.4 Outputs .....	3-2

**Table of Contents**

3.1.1.3 Load Utilization Parameters (SRS-003) ..... 3-2

    3.1.1.3.1 Introduction ..... 3-2

    3.1.1.3.2 Inputs ..... 3-2

    3.1.1.3.3 Processing ..... 3-2

    3.1.1.3.4 Outputs ..... 3-2

3.1.1.4 Set Trigger Values (SRS-004) ..... 3-2

    3.1.1.4.1 Introduction ..... 3-2

    3.1.1.4.2 Inputs ..... 3-2

    3.1.1.4.3 Processing ..... 3-2

    3.1.1.4.4 Outputs ..... 3-2

3.1.1.5 Set Overtemp Values (SRS-005) ..... 3-2

    3.1.1.5.1 Introduction ..... 3-2

    3.1.1.5.2 Inputs ..... 3-3

    3.1.1.5.3 Processing ..... 3-3

    3.1.1.5.4 Outputs ..... 3-3

3.1.1.6 Establish Valid Temperature Range (SRS-006) ..... 3-3

    3.1.1.6.1 Introduction ..... 3-3

    3.1.1.6.3 Processing ..... 3-3

    3.1.1.6.4 Outputs ..... 3-3

3.1.2 Initialize System (SRS-007) ..... 3-3

    3.1.2.1 Introduction ..... 3-3

    3.1.2.2 Inputs ..... 3-3

    3.1.2.3 Processing ..... 3-3

    3.1.2.4 Outputs ..... 3-4

3.1.3 Validate Temperature (SRS-008) ..... 3-4

    3.1.3.1 Introduction ..... 3-4

    3.1.3.2 Inputs ..... 3-4

    3.1.3.3 Processing ..... 3-4

    3.1.3.4 Outputs ..... 3-4

3.1.4 Monitor Temperature ..... 3-4

    3.1.4.1 Determine Temperature Status (SRS-009) ..... 3-4

        3.1.4.1.1 Introduction ..... 3-4

        3.1.4.1.2 Inputs ..... 3-5

**Table of Contents**

3.1.4.1.3 Processing ..... 3-5

3.1.4.1.4 Outputs ..... 3-5

3.1.4.2 Determine H/C Mode (SRS-010) ..... 3-5

3.1.4.2.1 Introduction ..... 3-5

3.1.4.2.2 Inputs ..... 3-5

3.1.4.2.3 Processing ..... 3-5

3.1.4.2.4 Outputs ..... 3-6

3.1.5 Determine Utilization ..... 3-6

3.1.5.1 Determine Status of All H/C Units (SRS-011) ..... 3-6

3.1.5.1.1 Introduction ..... 3-6

3.1.5.1.2 Inputs ..... 3-6

3.1.5.1.3 Processing ..... 3-6

3.1.5.1.4 Outputs ..... 3-6

3.1.5.2 Generate Unit Unavailable Event (SRS-012) ..... 3-7

3.1.5.2.1 Introduction ..... 3-7

3.1.5.2.2 Inputs ..... 3-7

3.1.5.2.3 Processing ..... 3-7

3.1.5.2.4 Outputs ..... 3-7

3.1.5.3 Generate H/C Request (SRS-013) ..... 3-7

3.1.5.3.1 Introduction ..... 3-7

3.1.5.3.2 Inputs ..... 3-7

3.1.5.3.3 Processing ..... 3-7

3.1.5.3.4 Outputs ..... 3-7

3.1.6 Generate H/C Signal (SRS-014) ..... 3-7

3.1.6.1 Introduction ..... 3-7

3.1.6.2 Inputs ..... 3-8

3.1.6.3 Processing ..... 3-8

3.1.6.4 Outputs ..... 3-8

3.1.7 Generate Alarm Data (SRS-015) ..... 3-8

3.1.7.1 Introduction ..... 3-8

3.1.7.2 Inputs ..... 3-8

3.1.7.3 Processing ..... 3-8

3.1.7.4 Outputs ..... 3-9

**Table of Contents**

3.1.8 Generate Event Data (SRS-016) ..... 3-9

    3.1.8.1 Introduction ..... 3-9

    3.1.8.2 Inputs ..... 3-9

    3.1.8.3 Processing ..... 3-9

    3.1.8.4 Outputs ..... 3-9

3.1.9 Change Thermostat Setting (SRS-017) ..... 3-9

    3.1.9.1 Introduction ..... 3-9

    3.1.9.2 Inputs ..... 3-9

    3.1.9.4 Processing ..... 3-9

    3.1.9.5 Outputs ..... 3-10

3.1.10 Generate Reports (SRS-018) ..... 3-10

    3.1.10.1 Introduction ..... 3-10

    3.1.10.2 Inputs ..... 3-10

    3.1.10.3 Processing ..... 3-10

    3.1.10.4 Outputs ..... 3-10

APPENDIX A - TRACEABILITY MATRIX ..... A-1

APPENDIX B - DATAFLOW DIAGRAMS ..... B-1

APPENDIX C - DATA DICTIONARY ..... C-1

## 1.0 Introduction

The following subsections of Section 1.0 provide an overview of the entire Software Requirements Specification.

### 1.1 Purpose

This Software Requirements Specification (SRS) specifies the qualification requirements for The Energy Management System (THEMAS). It provides a technical description of all software requirements of the system, provides traceability of software capability requirements to the Statement of Work, and identifies external interfaces. This document is intended for use by the Design Requirements team, Principle Software Architect, and other parties interested in the development and progression of THEMAS.

### 1.2 Scope

The scope of this document is confined to only the software requirements for the THEMAS system. Only those conditions expressed with the imperative "shall" are to be interpreted as binding requirements for this SRS. This document provides a detailed definition of all requirements for the THEMAS system. It does not provide a detailed definition of the exact systems that will interface with THEMAS. The SRS shall give a prototype of a simulated thermostat for verification and validation of THEMAS reliability. The requirements specified in this document are to be used as the basis for software design of the THEMAS system.

### 1.3 Definitions, Acronyms, and Abbreviations

The following section lists acronyms and abbreviations and their meaning as used in this document:

ANSI	American National Standards Institute
C	Cooling
DB	Database
DD	Data Dictionary
DFD	Data Flow Diagram
H	Heating
IEEE	Institute of Electrical and Electronic Engineers
LO	Lower Overtemperature Value
LT	Lower Trigger Value



D\_THEMAS\_SRS\_001

Appendix A contains the Dataflow Diagrams.

Appendix B contains the Traceability Matrix.

Appendix C contains the Data Dictionary.

## 2.0 General Description

This section of this SRS describes the general factors that effect the THEMAS system and its requirements. This section does not state specific requirements, it only makes these requirements easier understood.

### 2.1 Product Perspective

The THEMAS system is a system that operates independent of any other system, or any components of the heating and cooling system to which it is attached. The THEMAS system, however, is composed mainly of a hardware and software portion. This SRS only specifies the requirements dealing with the software portion of the system. If assumptions or dependencies about the hardware were made, they are stated in this section of the SRS.

### 2.2 Product Functions

The THEMAS system is divided into four major sections: Monitor Temperature, Determine Utilization, Initialize System, and System Reports. All four sections have an associated software configuration item; all except the System Reports have an associated hardware configuration item. The hardware requirements are contained in the system specification. The functions of the software for the system are contained in the following paragraphs.

#### 2.2.1 Monitor Temperature

The monitor temperature function receives the valid temperature and system parameters. The function then goes through the process of determining temperature status. After this process is done, either temperature limit is exceeded or the temperature change is requested. If the temperature change is requested, then the determine heating/cooling mode process is activated and makes a heating/cooling request. Some other processes that help the monitor temperature function are: validate temperature, change thermostat setting, generate alarm, and system initialization.

#### 2.2.2 Determine Utilization

The determine utilization function receives the heating/cooling request and utilization parameters. The function then processes the status of all heating/cooling units and sends out either unit unavailable or heating/cooling unit needed. The function generates either a unit unavailable event which goes into the System Reports function or it generates a heating/cooling signal to turn on/off the units. The Monitor Temperature and Initialize

System functions help the determine utilization to do its processes.

### 2.2.3 Initialize System

The initialize system function receives the initialization data for the THEMAS system. The processes that are associated with it are: load heating/cooling unit definitions, turn off all heating/cooling units, load thermostat definitions, load utilization parameters, set trigger values, set overtemperature values, and establish valid temperature range. The outgoing information that starts the entire THEMAS system is: clear all heating/cooling signals, send thermostat definitions, send utilization parameters, send trigger values, send overtemperature values, and send valid temperature range.

### 2.2.4 System Reports

The system reports function receives event data from the THEMAS system. This function is a database that stores all the events in the THEMAS system. This function is mainly for the use of the supervisor of the THEMAS system to maintain an efficient heating and cooling system. The only process that interacts with the system reports function is the generate event data process.

## 2.3 User Characteristics

This system is intended to be used by people that maintain the heating and cooling systems in a building. The system should not need intervention from outside users other than the supervisor to maintain operation of THEMAS. The system should provide warnings to the supervisor about faulty temperatures. The displaying of the current status of the system to the supervisor should not contain excessive information which could confuse the supervisor. The system should provide information in the form of reports to the supervisor so that the system can be run efficiently.

## 2.4 General Constraints

The general constraints of the THEMAS system focus on the functionality provided by the external devices connected to it. The thermostats shall only provide temperature values and temperature settings. The heating and cooling units provide no feedback to the THEMAS system. When a signal is sent to a heating or cooling unit, no signal shall be available to allow the THEMAS system to determine if the signal sent to the unit was realized by the unit.

## 2.5 Assumptions and Dependencies

In developing the requirements for the THEMAS system, several assumptions have been made about the thermostat hardware and the heating/cooling hardware. These assumptions are stated in the following paragraphs.

#### 2.5.1 Operating System Assumptions

The THEMAS system shall be designed to run on the Microsoft® Windows NT™ operating system. All the internal process communications shall be designed to operate on this operating system. Any communication with the thermostats and heating and cooling units shall be done through the interface to these units. These interfaces shall run on this operating system as well.

#### 2.5.2 Thermostat Hardware Assumptions

It is assumed that the thermostat is capable of returning the current temperature and the current desired temperature setting to the THEMAS system. The thermostat is constantly returning these values with no real time delay in between the thermostat and the THEMAS system. The thermostat also has the capability of being set and controlled by a user of the THEMAS system. All data sent by the thermostat is in the correct format for the THEMAS system to use.

#### 2.5.3 Heating/Cooling Hardware Assumptions

It is assumed that the heating/cooling unit is incapable of returning its current off/on status to the THEMAS system. The heating/cooling unit has no real time delay when sending these statuses to the THEMAS system. The heating/cooling unit shall have the capability of being turned off and on by the supervisor of the THEMAS system.

### 3.0 Engineering Requirements

#### 3.1 Functional Requirements

This section is subdivided into ten main subsections: Initialize Operational Parameters, Initialize System, Validate Temperature, Monitor Temperature, Determine Utilization, Generate H/C Signal, Generate Alarm Data, Generate Event Data, Change Thermostat Setting, and Generate Reports. Each subsection describes the software requirement for that individual software component of the THEMAS system.

##### 3.1.1 Initialize Operational Parameters

The following sections describe the Initialize System component of the THEMAS system.

###### 3.1.1.1 Load H/C Unit Definitions (SRS -001)

###### 3.1.1.1.1 Introduction

The THEMAS system shall control the heating and cooling units that are defined as part of the THEMAS system. The definitions of the individual heating and cooling systems reside in an initialization file. The system shall read this file and the definitions shall be derived from the initialization data in the file.

###### 3.1.1.1.2 Inputs

Initialization Data

###### 3.1.1.1.3 Processing

The THEMAS system shall use the information contained in the initialization data file to determine which heating and cooling units are part of the THEMAS system. There is one heating and cooling unit that corresponds to one thermostat in each of four quadrants on each of three floors of the office building.

###### 3.1.1.1.4 Outputs

Operational Parameters

###### 3.1.1.2 Load Thermostat Definitions (SRS -002)

###### 3.1.1.2.1 Introduction

Each thermostat shall have a unique identifier by which that thermostat is identified in the THEMAS system. This procedure will load these definitions into the THEMAS software.

###### 3.1.1.2.2 Inputs

Initialization Data

###### 3.1.1.2.3 Processing

Each quadrant of each floor shall have a thermostat which is to be used to provide temperature data to the THEMAS system. The

initialization file shall contain a unique identifier for each thermostat that the system is to monitor. These identifiers shall be read from the initialization file and loaded into the THEMAS system during the initialization process.

3.1.1.2.4 Outputs  
Operational Parameters

3.1.1.3 Load Utilization Parameters (SRS-003)

3.1.1.3.1 Introduction

There shall be a maximum number of heating or cooling units that can be on at any given time. This procedure loads the maximum number of concurrently running units allowed.

3.1.1.3.2 Inputs  
Initialization Data

3.1.1.3.3 Processing

The maximum number of heating or cooling units that can run concurrently shall reside in an initialization file. The maximum number of concurrently running units shall be read from the initialization file and stored in the THEMAS system.

3.1.1.3.4 Outputs  
Utilization Parameters

3.1.1.4 Set Trigger Values (SRS-004)

3.1.1.4.1 Introduction

The trigger value is used in combination with the current temperature to determine when a heating or cooling unit shall be turned on or off.

3.1.1.4.2 Inputs  
Initialization Data

3.1.1.4.3 Processing

The trigger values shall reside in an initialization file. This procedure shall read the initialization file and establish the trigger value from the data in that file.

3.1.1.4.4 Outputs  
Operational Parameters

3.1.1.5 Set Overtemp Values (SRS-005)

3.1.1.5.1 Introduction

The THEMAS system shall ensure the temperature reported by a given thermostat shall not exceed a maximum deviation value of 3 degrees Fahrenheit.

#### 3.1.1.5.2 Inputs

Initialization Data

#### 3.1.1.5.3 Processing

The overtemperature values shall reside in an initialization file. This procedure shall read the initialization file and establish the overtemperature value from the data in that file.

#### 3.1.1.5.4 Outputs

Operational Parameters

### 3.1.1.6 Establish Valid Temperature Range (SRS-006)

#### 3.1.1.6.1 Introduction

The THEMAS system shall only respond to temperatures that are within a reasonable value.

#### 3.1.1.6.2 Inputs

Initialization Data

#### 3.1.1.6.3 Processing

The valid temperature range value shall reside in an initialization file. This procedure shall read the initialization file and establish the valid temperature range from the data in it.

#### 3.1.1.6.4 Outputs

Operational Parameters

### 3.1.2 Initialize System (SRS-007)

#### 3.1.2.1 Introduction

When the THEMAS system is initialized, it shall first turn off all the heating and cooling units. Then, it shall check all the thermostats and determine if any thermostat's settings require a heating or cooling unit to be turned on back on.

#### 3.1.2.2 Inputs

Operational Parameters

#### 3.1.2.3 Processing

This process shall first determine a known state of all the heating and cooling units by issuing a request to turn off all the units. It shall then read the current temperature values and current temperature settings of each thermostat. If the settings reflect a need for a heating or cooling unit to be turned on, the process shall issue a request to turn on the appropriate unit. This determination shall be made in accordance with the rules outlined in section 3.1.4.1 and 3.1.4.2.

D\_THEMAS\_SRS\_001

#### 3.1.2.4 Outputs

H/C Request

#### 3.1.3 Validate Temperature (SRS-008)

##### 3.1.3.1 Introduction

The THEMAS system shall only respond to temperatures from the thermostats that are within the specified valid range.

##### 3.1.3.2 Inputs

Operational Parameters

Temperature Data

##### 3.1.3.3 Processing

Two types of temperature data shall be recognized from the thermostats: 1) the temperature setting and 2) the current temperature. This module shall process both types of data.

A current temperature value that is received from an individual thermostat shall be compared to the valid temperature range values. If the current temperature value is strictly less than the lower value of the valid temperature range or if the received temperature value is strictly greater than the upper value of the valid temperature range, then the THEMAS system shall identify the current temperature value as an invalid temperature and shall output an invalid temperature status. Otherwise, the THEMAS system shall output a valid temperature status.

A temperature setting value that is received from an individual thermostat shall be compared to the valid temperature range values. If the temperature setting value is strictly less than the lower value of the valid temperature range or if the temperature setting value is strictly greater than the upper value of the valid temperature range, then the THEMAS system shall identify the temperature setting as an invalid temperature and shall output an invalid temperature status. Otherwise, the THEMAS system shall realize the value for that thermostat's temperature setting.

##### 3.1.3.4 Outputs

Invalid Temperature

Valid Temperature

#### 3.1.4 Monitor Temperature

The following sections describe the Monitor Temperature component of the THEMAS system.

##### 3.1.4.1 Determine Temperature Status (SRS-009)

###### 3.1.4.1.1 Introduction

The THEMAS system shall determine when a reported temperature or a changed temperature setting exceeds the limits set by the

overtemperature values. Temperatures that exceed the overtemperature limits shall be reported as such. Temperatures that do not exceed these limits shall be output for subsequent processing.

#### 3.1.4.1.2 Inputs

Valid Temperatures  
Trigger Values  
Overtemp Values

#### 3.1.4.1.3 Processing

The THEMAS system shall compare the reported temperature value to the temperature setting and detect when the temperature value exceeds the specified limits. To clarify these conditions, the following definitions will be used:

LO : Lower Overtemperature Value = TSET - OD  
UO : Upper Overtemperature Value = TSET + OD

If  $T < LO$  or  $UO < T$  then the THEMAS system shall recognize this condition as the temperature limit has been exceeded. In this case this process shall output the condition of the temperature limit having been exceeded.

If  $LO \leq T \leq UO$ , then this process shall output the temperature status.

#### 3.1.4.1.4 Outputs

Temperature Trigger Exceeded  
Temperature Limit Exceeded

#### 3.1.4.2 Determine H/C Mode (SRS-010)

##### 3.1.4.2.1 Introduction

When the current temperature value exceeds the current temperature setting by a pre-defined amount, the THEMAS system shall activate the appropriate heating or cooling unit.

##### 3.1.4.2.2 Inputs

Temperature Trigger Exceeded

##### 3.1.4.2.3 Processing

There are two conditions for each individual thermostat that shall be tested for: 1) the thermostat's settings are satisfied and 2) the thermostat's temperature indicates it requires a heating or cooling unit to be turned on. To clarify these conditions, the following definitions will be used:

LT : Lower Trigger Value = TSET - TD  
UT : Upper Trigger Value = TSET + TD

Condition 1:  $LT \leq T \leq UT$

This condition indicates the thermostat's current temperature setting is satisfied. If this condition is true, then the module shall output a request to turn off both the heating unit and the cooling unit.

Condition 2:  $LO \leq T < LT$  or  $UT < T \leq UO$

This condition the need for a heating or cooling unit to be turned on. If this condition is true, then this module shall output a request to turn on the heating unit if  $LO \leq T < LT$  or the cooling unit if  $UT < T \leq UO$ .

#### 3.1.4.2.4 Outputs

H/C Request

#### 3.1.5 Determine Utilization

##### 3.1.5.1 Determine Status of All H/C Units (SRS-011)

###### 3.1.5.1.1 Introduction

The THEMAS system shall control each of the heating and cooling units that are defined for the system. The THEMAS system shall limit the number of heating or cooling units that may be running simultaneously.

###### 3.1.5.1.2 Inputs

Operational Parameters

H/C Request

###### 3.1.5.1.3 Processing

The THEMAS system shall maintain the ON/OFF status of each heating and cooling unit. When a request to turn on or off a heating or cooling unit, the following processing will occur.

When a request to turn on a heating or cooling unit is received, the system shall determine if the request can be honored. If the maximum number of heating or cooling units is already running, the request will be added to a LIFO queue. If the maximum number of heating or cooling units is not running, this process will generate a request to turn on the requested unit.

When a request to turn off a heating or cooling unit is received, this process shall check the queue of waiting heating and cooling requests. If the queue is not empty, this process shall remove one request from the LIFO queue and check the current state of the thermostat for which the queued request was made. If that thermostat still needs a heating or cooling unit turned on, this process shall submit a request to turn that unit on.

###### 3.1.5.1.4 Outputs

Unit Unavailable

H/C ON/OFF Request

3.1.5.2 Generate Unit Unavailable Event (SRS-012)

3.1.5.2.1 Introduction

When a request for a heating unit or cooling to be turned is denied, an event shall be generated and the THEMAS system shall record that event. The information in these events will be used for creating statistical reports.

3.1.5.2.2 Inputs

Unit Unavailable

3.1.5.2.3 Processing

This procedure shall realize the thermostat and heating or cooling information and use this information to generate a specific system event. This system event shall consist of a description of the event type (a request denied event), a designation of the thermostat that made the request, and a designation of the heating or cooling unit that was not turned on.

3.1.5.2.4 Outputs

System Event Data

3.1.5.3 Generate H/C Request (SRS-013)

3.1.5.3.1 Introduction

The THEMAS system shall control the heating and cooling units that are designated as part of the THEMAS system.

3.1.5.3.2 Inputs

H/C ON/OFF Request

3.1.5.3.3 Processing

When a request to turn on or off a heating or cooling unit is made, this process shall generate the appropriate request to carry out that request. This request shall include the designation of the heating or cooling unit and a flag to indicate whether that unit is to be turned on or off.

3.1.5.3.4 Outputs

Approved H/C Request

3.1.6 Generate H/C Signal (SRS-014)

3.1.6.1 Introduction

Once a request to turn on or off a heating or cooling unit, the THEMAS system shall provide the necessary control signal for the unit. This control signal shall also provide an indication of the unit's status at the requesting thermostat.

### 3.1.6.2 Inputs

Approved H/C Request

### 3.1.6.3 Processing

This process shall recognize the values for the requested heating or cooling unit and the ON or OFF status that is being requested. The necessary signal to the heating or cooling unit will be generated. Since the interface to control the units has not been defined, the part of this process that will issue the signal is designated as TBD(to be determined).

In order to provide an indication of the status of the heating or cooling unit back to the requesting thermostat, this procedure shall output the status information of the heating or cooling unit.

In order to provide an operational history and statistical reports, this process shall generate an event each time a change is made to the status of a heating or cooling unit. This event shall contain the identification of the heating or cooling unit whose status is being changed.

### 3.1.6.4 Outputs

Heating Unit Signal

Cooling Unit Signal

Unit Status

System Events

## 3.1.7 Generate Alarm Data (SRS-015)

### 3.1.7.1 Introduction

There are two events that shall result in an alarm condition: 1) an invalid temperature value is reported from a thermostat, or 2) the reported temperature has exceeded the defined limits. This process shall determine which alarm event is to be generated.

### 3.1.7.2 Inputs

Invalid Temperature

Temperature Limit Exceeded

### 3.1.7.3 Processing

When the THEMAS system detects a request for an alarm, this process shall detect which of the two alarms are being requested.

If the system detects an invalid temperature, this process shall output a continuous series of alternating 500 Hz and 700 Hz beeps on the supervisor's computer. Each beep shall have a three-quarter second duration. This series of beeps shall continue until the supervisor manually resets the alarm through the supervisor's interface window.

If the system detects a temperature limit has been exceeded, this process shall output a continuous series of alternating 1000 Hz and 1500 Hz beeps on the supervisor's computer. Each beep shall have a one-half second duration. This series of beeps shall continue until the supervisor manually resets the alarm through the supervisor's interface window.

Each time an alarm is requested, an alarm event shall be recorded. This event shall be used to provide operational and statistical reports about the system.

#### 3.1.7.4 Outputs

Alarm Data

Alarm Events

#### 3.1.8 Generate Event Data (SRS-016)

##### 3.1.8.1 Introduction

For each event that is generated, the THEMAS system shall identify each event and generate the appropriate event data.

##### 3.1.8.2 Inputs

Alarm Events

System Events

Denied H/C Request

##### 3.1.8.3 Processing

When an event occurs, the THEMAS system shall identify the event type and format an appropriate event message. The THEMAS system shall record each event by a description and the current system time for that event. This information shall be recorded in a Microsoft® Access® database that shall reside on the supervisor's computer.

##### 3.1.8.4 Outputs

Event Data

#### 3.1.9 Change Thermostat Setting (SRS-017)

##### 3.1.9.1 Introduction

The THEMAS system shall provide the supervisor a mechanism to change the temperature setting of any of the thermostats in the system.

##### 3.1.9.2 Inputs

Operational Parameters

##### 3.1.9.4 Processing

The supervisor's interface shall display the available thermostats and their individual current temperature settings.

The supervisor shall be able to select one of the thermostats and select a value for the current temperature from a list of valid temperatures.

#### 3.1.9.5 Outputs Temperature Data

### 3.1.10 Generate Reports (SRS-018)

#### 3.1.10.1 Introduction

The THEMAS shall provide the ability for the supervisor to select between two different types of reports: 1) the operational history of the THEMAS system for the past twelve months and 2) a statistical summary for any selected month.

#### 3.1.10.2 Inputs Event Data

#### 3.1.10.3 Processing

The supervisor's interface to the THEMAS system shall provide a mechanism to select between an operational history report or a statistical summary report. Either report shall consist of an ASCII file whose location and name shall be selectable by the operator.

If the operational history report is selected, the THEMAS system shall select all the events from the event database, sort the events by date and time, and create the ASCII report file.

If the statistical report is selected, the THEMAS system shall present the operator with a list of available months from which to make a selection. After selecting one of the months, the system shall generate the ASCII report file. The statistical reports shall consist of the following statistics:

1. The percentage of time each heating and cooling unit was on for each day of that month.
2. For each thermometer, the ratio of the number of requests for a heating and cooling unit that was granted to the number of requests for a heating or cooling unit that was denied.

#### 3.1.10.4 Outputs Report Data

D\_THEMAS\_SRS\_001


APPENDIX A - TRACEABILITY MATRIX


D\_THEMAS\_SRS\_001


SRS Requirement	Requirement Description	Statement of Work Paragraph
SRS-001	Load H/C Unit Definitions	
SRS-002	Turn off H/C Units	2.5
SRS-003	Load Thermostat Definition	
SRS-004	Load Utilization Parameters	
SRS-005	Set Trigger Values	
SRS-006	Set Overtemp Values	
SRS-007	Establish Valid Temperature Range	
SRS-008	Validate Temperature	3.1
SRS-009	Determine Temperature Status	3.2
SRS-010	Determine H/C Mode	
SRS-011	Determine Status of all H/C Units	
SRS-012	Generate Unit Unavailable Event	
SRS-013	Generate H/C Request	2.5
SRS-014	Generate H/C Signal	2.1, 2.2, 2.5
SRS-015	Generate Alarm Data	3.1
SRS-016	Generate Event Data	5.1, 5.2
SRS-017	Change Thermostat Setting	2.4
SRS-018	Generate Reports	5.2


D\_THEMAS\_SRS\_001


## APPENDIX B - DATAFLOW DIAGRAMS

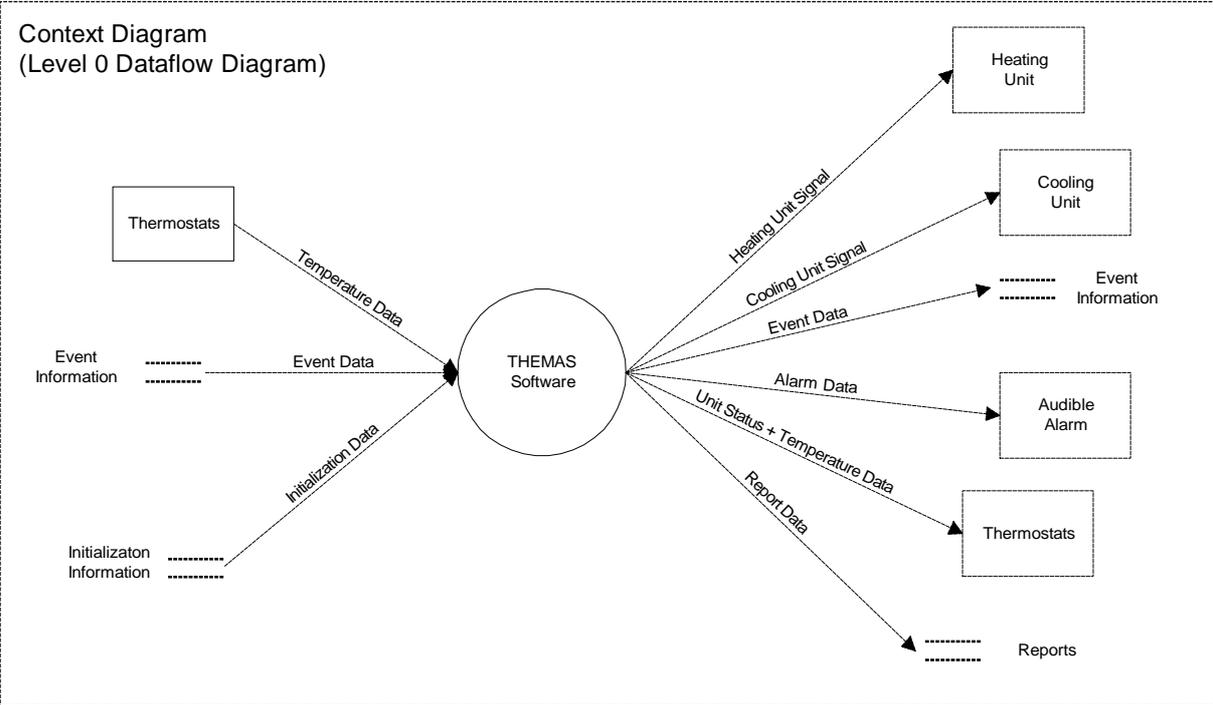

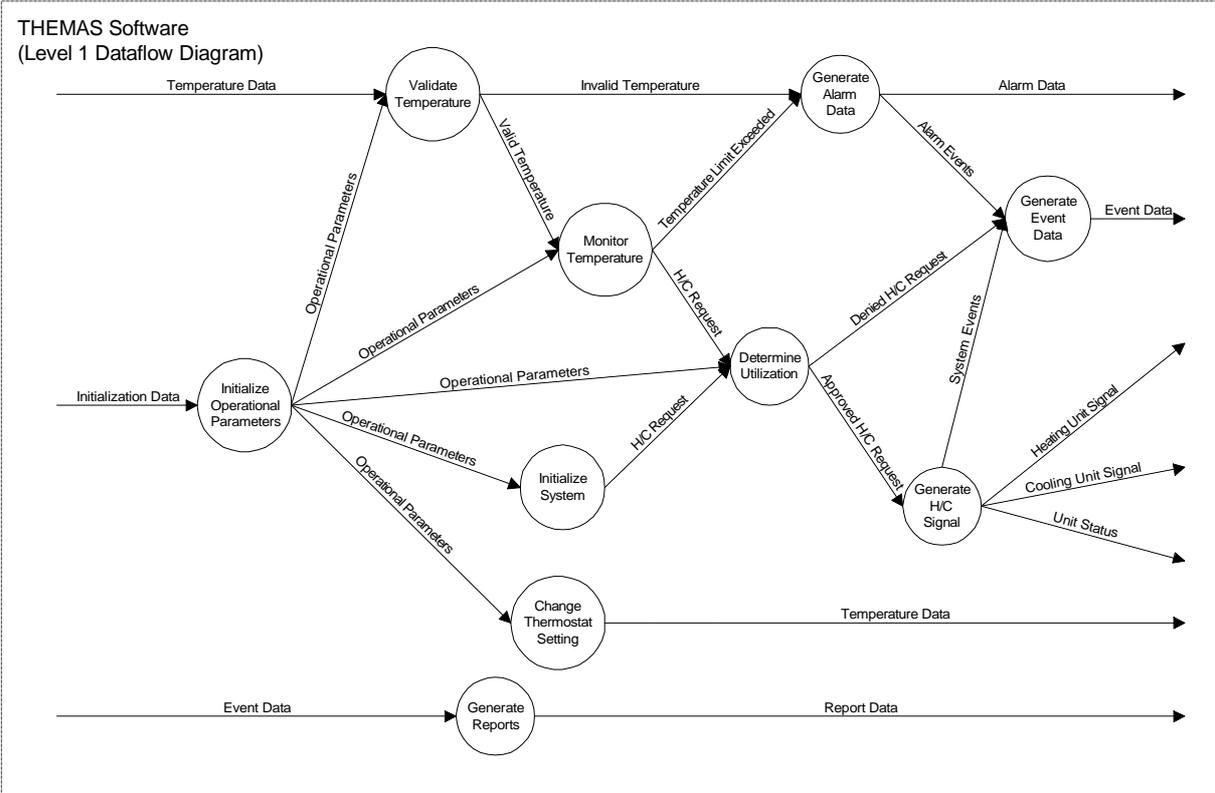

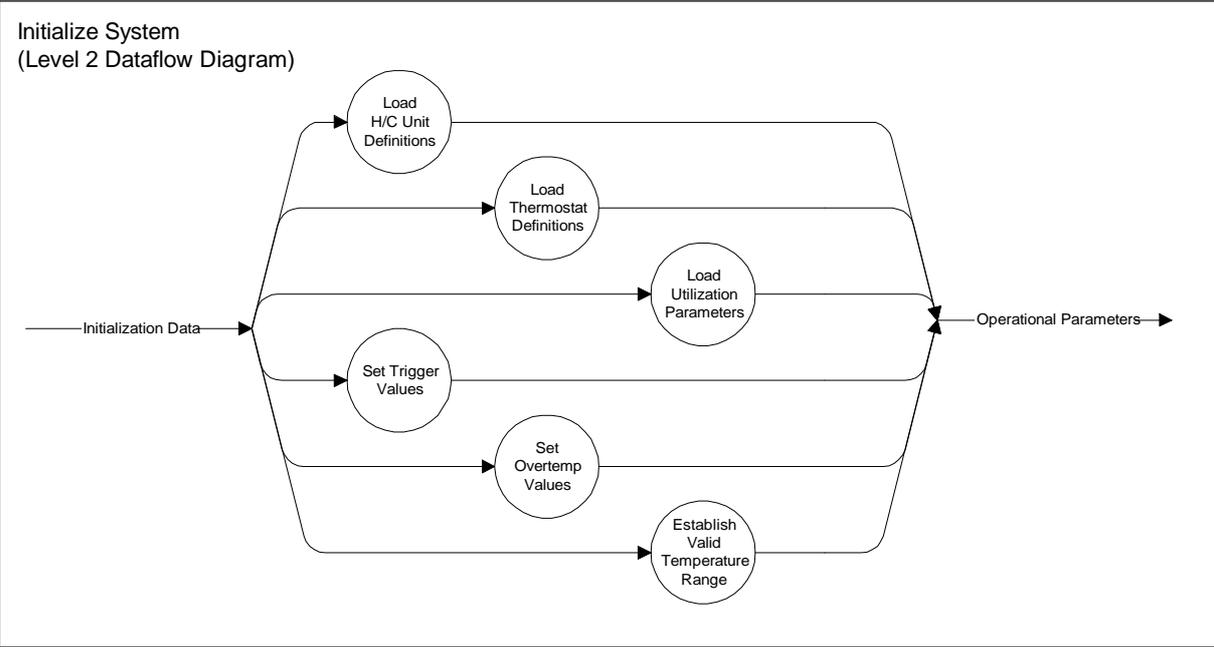

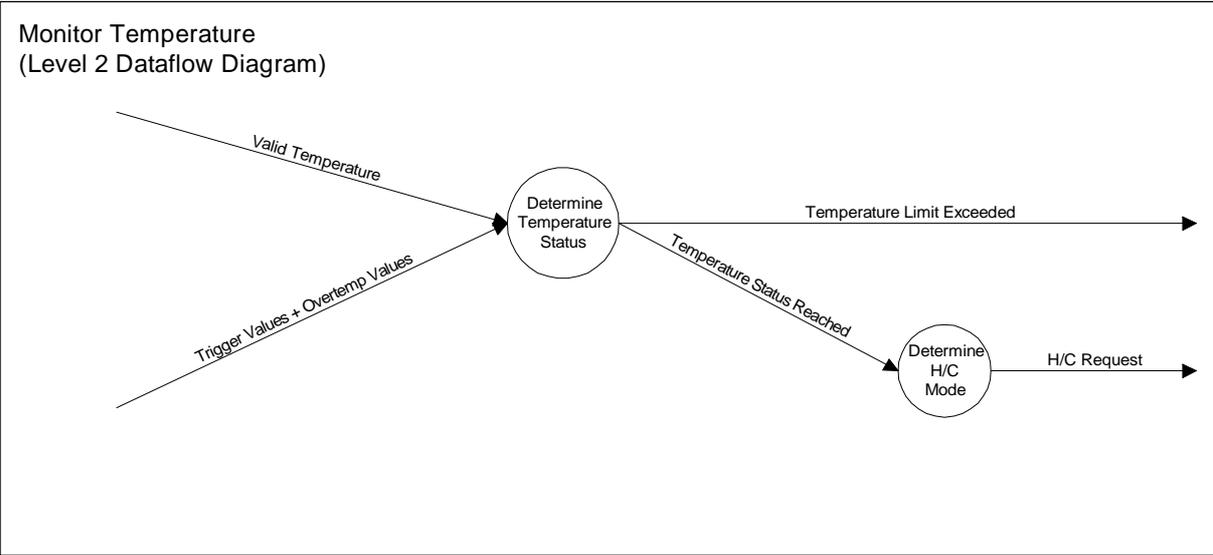

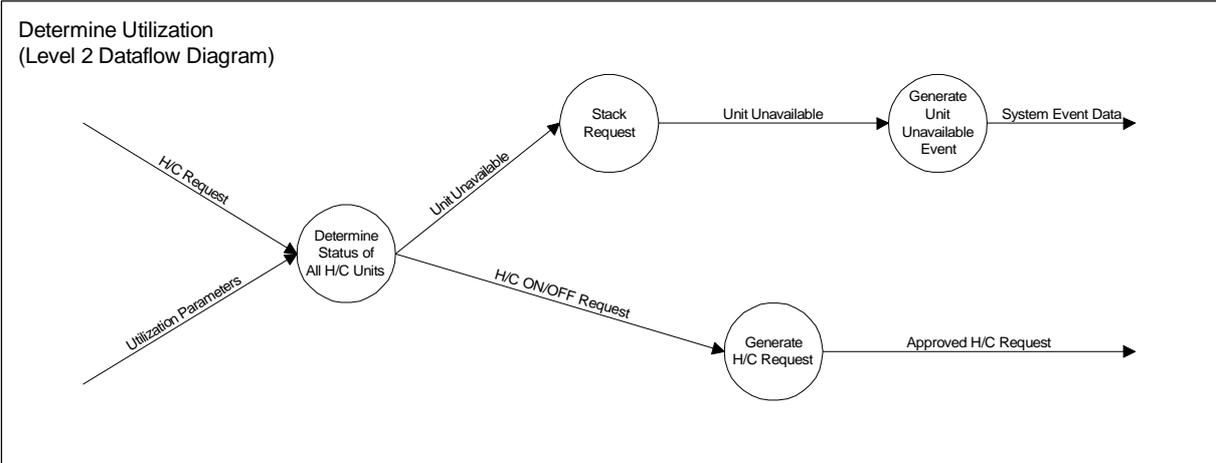

D\_THEMAS\_SRS\_001

APPENDIX C - DATA DICTIONARY

D\_THEMAS\_SRS\_001

### **Alarm Data**

Allowed Meanings  
String

Notes  
Defines the various alarm types.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Generate Alarm Data  
THEMAS Context Diagram

### **Alarm Events**

Allowed Meanings  
String

Notes  
Describes the event that caused an alarm to occur.

Input To Transforms  
Generate Event Data

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Generate Alarm Data

### **Approved H/C Request**

Allowed Meanings  
String

Notes  
Defines the thermostat and heating or cooling unit to turn on or off.

Input To Transforms  
Generate H/C Signal

Next Higher Dictionary Where Used  
(None)

D\_THEMAS\_SRS\_001

Output From Transforms  
Determine Utilization  
Generate H/C Request

**Timestamp**

Allowed Meanings  
String

Notes  
Denotes the current system date and time on the supervisor's computer.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
Report Data

Output From Transforms  
(None)

**Denied H/C Request**

Allowed Meanings  
String

Notes  
Defines the thermostat that requested heating or cooling, but was denied the request due to current system loading.

Input To Transforms  
Generate Event Data

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Determine Utilization

**Event Data**

Allowed Meanings  
String + Date

Notes  
Describes the entries that are written to the database that are associated with each event that occurs in the system.

Input To Transforms

D\_THEMAS\_SRS\_001

(None)

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Generate Event Data  
Generate Unit Unavailable Event  
THEMAS Context Diagram

### **H/C Request**

Allowed Meanings  
String

#### Notes

When the system detects a need for heating or cooling, this defines the thermostat and heating or cooling unit to turn on or off.

Input To Transforms  
Determine Utilization  
Determine Status of All H/C Units

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Initialize System  
Monitor Temperature

### **H/C ON/OFF Request**

Allowed Meanings  
String

#### Notes

Defines a request to generate the signal to turn on or off a heating or cooling unit resulting from an approved request for a heating or cooling unit.

Input To Transforms  
Generate H/C Request

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Determine Status of All H/C Units

D\_THEMAS\_SRS\_001

### **H/C Unit Definitions**

Allowed Meanings  
String

Notes  
Defines each discrete heating and cooling unit in the system.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
Operational Parameters

Output From Transforms  
(None)

### **Initialization Data**

Allowed Meanings  
String + Integer

Notes  
Information from the initialization file that include the thermostat definitions, heating and cooling definitions, temperature limits, and trigger values.

Input To Transforms  
Establish Valid Temperature Range  
Initialize Operational Parameters  
Load H/C Unit Definitions  
Load Thermostat Definitions  
Load Utilization Parameters  
Set Trigger Values  
Set Overtemp Values  
THEMAS Context Diagram

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
(None)

### **Invalid Temperature**

Allowed Meanings  
String

Notes

D\_THEMAS\_SRS\_001

Denotes the condition when an erroneous temperature is reported from a thermostat.

Input To Transforms  
Generate Alarm Data

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Validate Temperature

### **Operational Parameters**

Allowed Meanings

Determine Status Of All H/C Units + H/C Unit Definitions +  
Overtemp Values + Thermostat Definitions + Trigger Values +  
Utilization Parameters + Valid Temperatures

Notes

Information from the initialization file that include the thermostat definitions, heating and cooling definitions, temperature limits, and trigger values.

Input To Transforms  
Change Thermostat Setting  
Determine Utilization  
Initialize System  
Monitor Temperature  
Validate Temperature

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
(None)

### **Overtemp Values**

Allowed Meanings  
Integer

Notes

Defines the delta value relative to the temperature setting value. A temperature at or beyond this delta indicates the thermostat has reached a critical value where the heating or cooling unit cannot satisfy the temperature setting value.

Input To Transforms  
(None)

D\_THEMAS\_SRS\_001

Next Higher Dictionary Where Used  
Operational Parameters

Output From Transforms  
(None)

### **Report Data**

Allowed Meanings  
String + Timestamp

Notes  
Contains the formatted report information.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Generate Reports  
THEMAS Context Diagram

### **System Events**

Allowed Meanings  
String

Notes  
Describes each normal operational event that occurs in the system.

Input To Transforms  
Generate Event Data

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Generate H/C Signal

### **Temperature Data**

Allowed Meanings  
String + Integer

Notes  
Temperature and thermostat information to and from the thermostats.

D\_THEMAS\_SRS\_001

Input To Transforms  
THEMAS Context Diagram  
Validate Temperature

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Change Thermostat Setting

### **Temperature Limit Exceeded**

Allowed Meanings  
String

Notes  
Denotes the condition when the reported temperature has exceeded the overtemperature value.

Input To Transforms  
Generate Alarm Data

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Determine Temperature Status  
Monitor Temperature

### **Temperature Trigger Exceeded**

Allowed Meanings  
String

Notes  
Denotes the condition when the reported temperature has exceeded the triggering value indicating a heating or cooling unit should be requested.

Input To Transforms  
Determine H/C Mode

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Determine Temperature Status

### **Thermostat Definitions**

D\_THEMAS\_SRS\_001

Allowed Meanings  
String

Notes  
The unique identifier associated with each thermostat in the system.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
Operational Parameters

Output From Transforms  
(None)

### **Trigger Values**

Allowed Meanings  
Integer

Notes  
Defines the delta value relative to the temperature setting value. A temperature beyond this delta indicates the thermostat is requesting a heating or cooling unit event to occur.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
Operational Parameters

Output From Transforms  
(None)

### **Unit Status**

Allowed Meanings  
String

Notes  
Defines the current on or off condition of the heating and cooling units and the thermostat to which they are associated.

Input To Transforms  
(None)

Next Higher Dictionary Where Used

D\_THEMAS\_SRS\_001

(None)

Output From Transforms  
Generate H/C Signal

### **Unit Unavailable**

Allowed Meanings  
String

#### Notes

Defines the heating or cooling unit that was denied a request to be turned on. Generated in response to a denied request.

Input To Transforms  
Generate Unit Unavailable Event  
Stack Request

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Determine Status of All H/C Units  
Stack Request

### **Valid Temperatures**

Allowed Meanings  
Integer

#### Notes

Defines the upper and lower limits for a reported temperature value.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
Operational Parameters

Output From Transforms  
(None)

### **Utilization Parameters**

Allowed Meanings  
Integer

#### Notes

D\_THEMAS\_SRS\_001

Defines how many heating and cooling units that can run simultaneously.

Input To Transforms  
(None)

Next Higher Dictionary Where Used  
Operational Parameters

Output From Transforms  
(None)

### **Valid Temperature**

Allowed Meanings  
String

Notes  
Denotes the condition when an valid temperature is reported from a thermostat.

Input To Transforms  
Monitor Temperature

Next Higher Dictionary Where Used  
(None)

Output From Transforms  
Validate Temperature